


# SHARP

Important

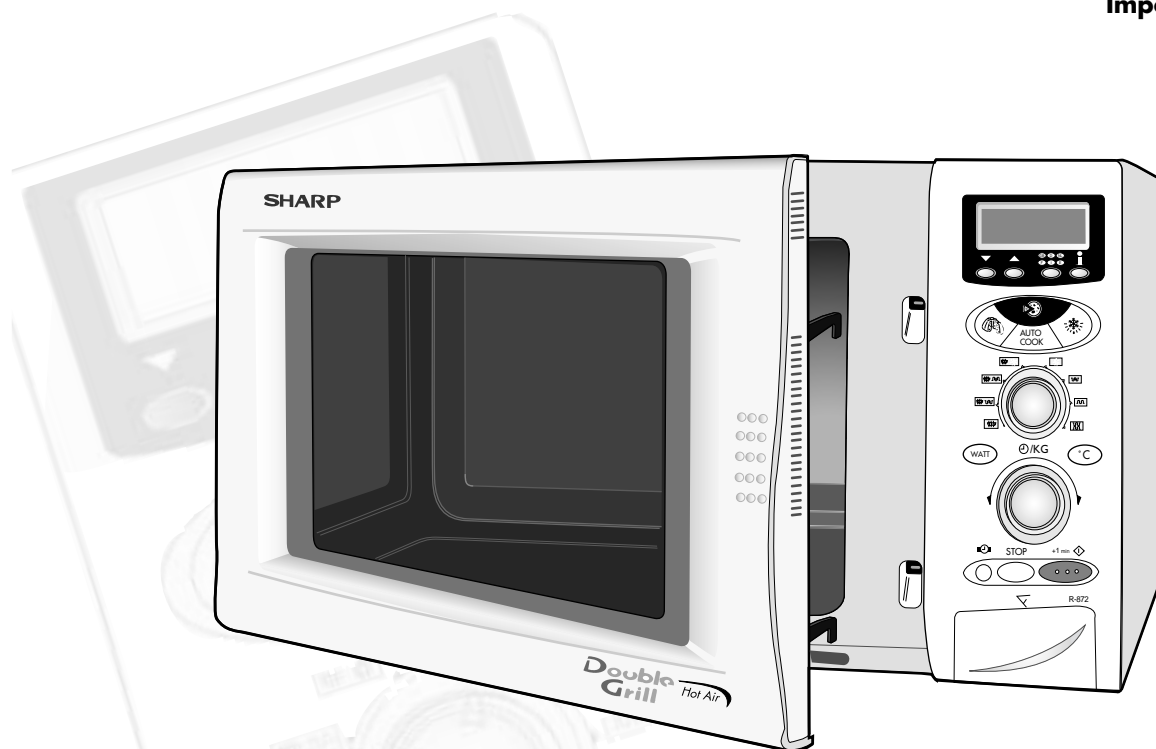

## **R-872 MICROWAVE OVEN WITH TOP & BOTTOM GRILLS AND CONVECTION**

### **OPERATION MANUAL**

**900 W (IEC 705)**

ENGLISH





OVEN AND ACCESSORIES .....	2
CONTROL PANEL .....	3
IMPORTANT SAFETY INSTRUCTIONS .....	4 - 6
INSTALLATION .....	6
BEFORE OPERATION .....	7
SELECTING THE LANGUAGE .....	7
USING THE STOP BUTTON .....	8
ENERGY SAVE MODE .....	8
SETTING THE CLOCK .....	9
MICROWAVE POWER LEVELS .....	9
MICROWAVE COOKING .....	10
HEATING WITHOUT FOOD .....	10
GRILL COOKING .....	11
CONVECTION COOKING .....	12 - 13
DUAL COOKING .....	14 - 15
OTHER CONVENIENT FUNCTIONS .....	16 - 18
AUTOMATIC OPERATION .....	19 - 20
PIZZA/QUICHE CHART .....	21
CAKE/BREAD CHART .....	22
AUTO COOK CHART .....	22 - 24
AUTO DEFROST CHART .....	25
CARE AND CLEANING .....	26
SERVICE CALL CHECK .....	27
SPECIFICATIONS .....	28
SERVICE ADDRESSES .....	29 - 32


## OPERATION MANUAL

**This operation manual contains important information which you should read carefully before using your microwave oven.**


**IMPORTANT: There may be a serious risk to health if this operation manual is not followed or if the oven is modified so that it operates with the door open.**



## OVEN AND ACCESSORIES

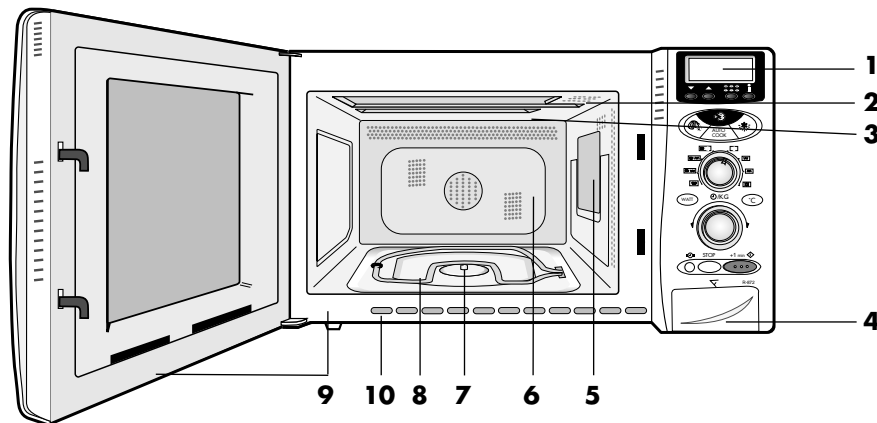

- 1 Control panel
- 2 Oven lamp
- 3 Grill heating element (top grill)
- 4 Door opening button
- 5 Waveguide cover
- 6 Oven cavity
- 7 Turntable motor shaft
- 8 Grill heating element (bottom grill)
- 9 Door seals and sealing surfaces
- 10 Ventilation openings
- 11 Power cord
- 12 Outer cabinet

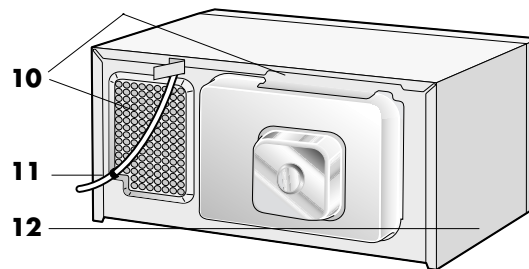

### ACCESSORIES:

Check to make sure the following accessories are provided:




**13** Turntable **14** Low rack **15** High rack

Place the turntable over the turntable motor shaft on the floor of the cavity.

Before first using the turntable, and racks, clean with mild soapy water. Do not cut or scratch the turntable.


### WARNING:

**The accessories (e.g. turntable) will become very hot during GRILL, DUAL, CONVECTION and AUTOMATIC OPERATION (except Auto Defrost) modes. Always use thick oven gloves when removing the food or turntable from the oven to prevent burns.**

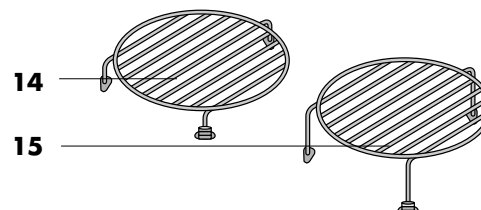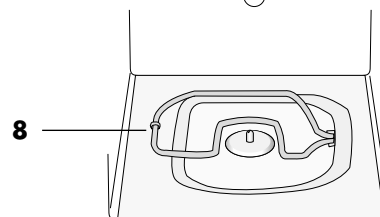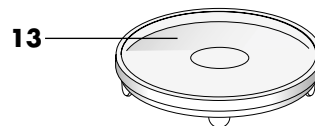

**NOTE:** When you order accessories, please mention the following two items: part name and model name to your dealer or SHARP authorised service agent.

## CONTROL PANEL

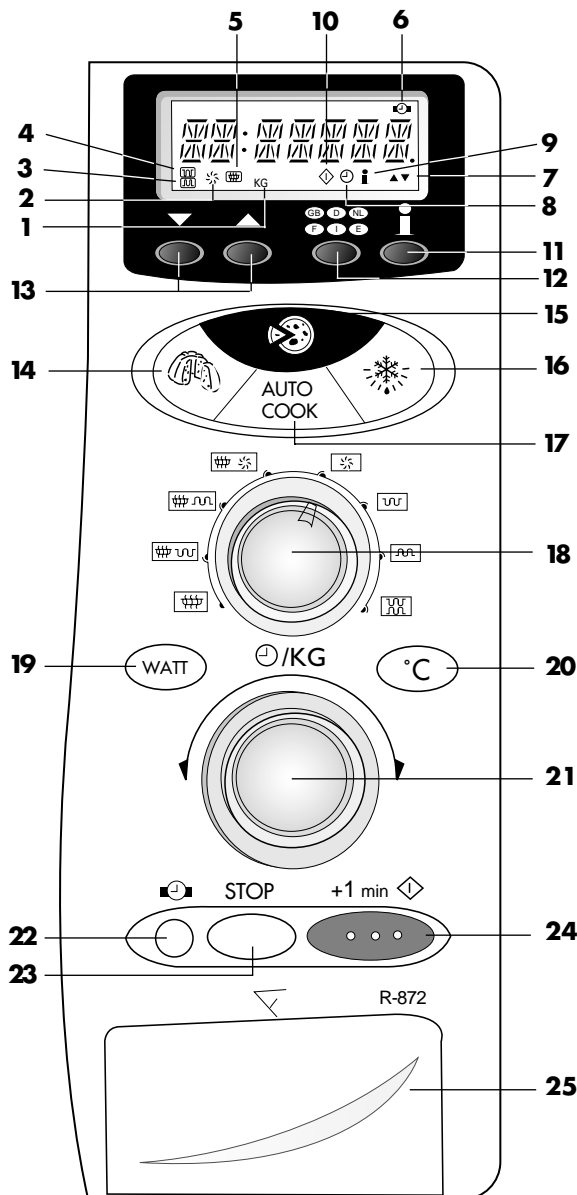

### Digital display and indicators:

- 1 **WEIGHT** (kg) indicator
- 2 **CONVECTION** indicator
- 3 **BOTTOM GRILL** indicator
- 4 **TOP GRILL** indicator
- 5 **MICROWAVE** indicator
- 6 **CLOCK SET** indicator
- 7 **LESS/MORE** indicator
- 8 **TIMER** indicator
- 9 **INFORMATION** indicator
- 10 **COOKING-IN PROGRESS** indicator

### Operating buttons:

- 11 **INFORMATION** button
- 12 **LANGUAGE** button
- 13 **LESS/MORE** buttons
- 14 **CAKE/BREAD** button
- 15 **PIZZA** button
- 16 **AUTO DEFROST** button
- 17 **AUTO COOK** button
- 18 **COOKING MODE** dial  
Rotate the dial so that indicator points to appropriate symbol:
  - for microwave cooking
  - for microwave cooking with TOP GRILL
  - for microwave cooking with BOTTOM GRILL
  - for microwave cooking with CONVECTION
  - for CONVECTION
  - for TOP GRILL
  - for BOTTOM GRILL
  - for TOP & BOTTOM GRILLS
- 19 **MICROWAVE POWER LEVEL** button  
Press to change the microwave power setting
- 20 **CONVECTION** button  
Press to change the convection setting
- 21 **TIME/WEIGHT** dial  
Rotate the dial to enter either the cooking/defrosting time or weight of food
- 22 **CLOCK SETTING** button
- 23 **STOP** button
- 24 **+ 1 min** / **START** button
- 25 **DOOR OPEN** button



## IMPORTANT SAFETY INSTRUCTIONS

### IMPORTANT SAFETY INSTRUCTIONS: READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

#### To avoid the danger of fire

**The microwave oven should not be left unattended during operation. Power levels that are too high or cooking times that are too long may overheat foods resulting in a fire.**

In cases where the oven is to be installed into kitchen cabinet, the installation frame EBR-4700 licensed by SHARP must be used. This is available from your dealer. Refer to the frame installation instructions or ask your dealer for the proper instruction procedure. Only the use of this frame will guarantee the safety and quality of the product.

The electrical outlet must be readily accessible so that the unit can be unplugged easily in an emergency.

The AC power supply must be 230 V, 50 Hz, with a minimum 16 A distribution line fuse, or a minimum 16 A distribution circuit breaker.

It is recommended that a separate circuit serving only this appliance be provided.

Do not place the oven in areas where heat is generated. For example, close to a conventional oven. Do not install the oven in an area of high humidity or where moisture may collect.

Do not store or use the oven outdoors.

**If food being heated begins to smoke, DO NOT OPEN THE DOOR. Turn off and unplug the oven and wait until the food has stopped smoking. Opening the door while food is smoking may cause a fire.**

**Use only microwave-safe containers and utensils. See Page X.**

**Do not leave the oven unattended when using disposable plastic, paper or other combustible food containers.**

**Clean the waveguide cover, the oven cavity and the turntable after use. These must be dry and free from grease. Built-up grease may overheat and begin to smoke or catch fire.**

Do not place flammable materials near the oven or ventilation openings. Do not block the ventilation openings.

Remove all metallic seals, wire twists, etc., from food and food packages. Arcing on metallic surfaces may cause a fire.

Do not use the microwave oven to heat oil for deep frying. The temperature cannot be controlled and the oil may catch fire.

To make popcorn, use only special microwave popcorn makers.

Do not store food or any other items inside the oven.

Check the settings after you start the oven to ensure the oven is operating as desired.

See the corresponding hints in the cookery book section.

#### To avoid the possibility of injury

##### WARNING:

Do not operate the oven if it is damaged or malfunctioning. Check the following before use:

- a) The door; make sure the door closes properly and ensure it is not misaligned or warped.
- b) The hinges and safety door latches; check to make sure they are not broken or loose.
- c) The door seals and sealing surfaces; ensure that they have not been damaged.
- d) Inside the oven cavity or on the door; make sure there are no dents.
- e) The power supply cord and plug; ensure that they are not damaged.

**Never adjust, repair or modify the oven yourself. It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to microwave energy.**

Do not operate the oven with the door open or alter the door safety latches in any way.

Do not operate the oven if there is an object between the door seals and sealing surfaces.

**Do not allow grease or dirt to build up on the door seals and adjacent parts. Follow instructions for "Care and Cleaning", Page 26.**

Individuals with PACEMAKERS should check with their doctor or the manufacturer of the pacemaker for precautions regarding microwave ovens.

#### To avoid the possibility of electric shock

Under no circumstances should you remove the outer cabinet.

Never spill or insert any objects into the door lock openings or ventilation openings. In the event of a spill, turn off and unplug the oven immediately, and call an authorised SHARP service agent.

Do not immerse the power supply cord or plug in water or any other liquid.

Do not let the power supply cord hang over the edge of a table or work surface.

## IMPORTANT SAFETY INSTRUCTIONS



Keep the power supply cord away from heated surfaces, including the rear of the oven.

Do not attempt to replace the oven lamp yourself or allow anyone who is not an electrician authorised by SHARP to do so. If the oven lamp fails, please consult your dealer or an authorised SHARP service agent.

If the power supply cord of this appliance is damaged, it must be replaced with a special cord. The exchange must be made by an authorised SHARP service agent.

### **To avoid the possibility of explosion and sudden boiling:**

**WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.**

Never use sealed containers. Remove seals and lids before use. Sealed containers can explode due to a build up of pressure even after the oven has been turned off.

Take care when microwaving liquids. Use a wide-mouthed container to allow bubbles to escape.

**Never heat liquids in narrow necked containers such as baby bottles, as this may result in the contents erupting from the container when heated and cause burns.**

To prevent sudden eruption of boiling liquid and possible scalding:

1. Stir liquid prior to heating/reheating.
2. It is advisable to insert a glass rod or similar utensil into the liquid whilst reheating.
3. Let liquid stand in the oven at the end of cooking time to prevent delayed eruptive boiling.

**Do not cook eggs in their shells, and whole hard boiled eggs should not be heated in microwave ovens since they may explode even after microwave cooking has ended. To cook or reheat eggs which have not been scrambled or mixed, pierce the yolks and the whites, or the eggs may explode. Shell and slice hard boiled eggs before reheating them in the microwave oven.**

Pierce the skin of such foods as potatoes, sausages and fruit before cooking, or they may explode.

### **To avoid the possibility of burns**

Use pot holders or oven gloves when removing food from the oven to prevent burns.

Always open containers, popcorn makers, oven cooking bags, etc., away from the face and hands to avoid steam burns.

**To avoid burns, always test food temperature and stir before serving and pay special attention to the temperature of food and drink given to babies, children or the elderly.**

Temperature of the container is not a true indication of the temperature of the food or drink; always check the food temperature.

Always stand back from the oven door when opening, to avoid burns from escaping steam and heat.

Slice stuffed baked foods after heating to release steam and avoid burns.

Keep children away from the door to prevent them burning themselves.

Do not touch the oven door, outer cabinet, rear cabinet, oven cavity, ventilation openings, accessories and dishes during **GRILL** mode, **CONVECTION** mode, **DUAL** mode and **AUTO COOK** (except **AUTO DEFROST**) operation as they will become hot. Before cleaning make sure they are not hot.

### **To avoid misuse by children**

**WARNING: Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.**

Do not lean or swing on the oven door. Do not play with the oven or use it as a toy.

Children should be taught all important safety instructions: use of pot holders, careful removal of food coverings; paying special attention to packaging (e.g. self-heating materials) designed to make food crisp, as they may be extra hot.

### **Other warnings**

Never modify the oven in any way.

Do not move the oven while it is in operation.

This oven is for home food preparation only and may only be used for cooking food. It is not suitable for commercial or laboratory use.

### **To promote trouble-free use of your oven and avoid damage.**

Never operate the oven when it is empty except where recommended in the operation manual, see Page 10. Doing so may damage the oven.

When using a browning dish or self-heating material, always place a heat-resistant insulator such as a porcelain plate under it to prevent damage to the turntable due to heat stress. The preheating time specified in the dish's instructions must not be exceeded.



## IMPORTANT SAFETY INSTRUCTIONS

Do not use metal utensils, which reflect microwaves and may cause electrical arcing. Do not put cans in the oven.

Use only the turntable designed for this oven.

Do not place anything on the outer cabinet during operation.

Do not use plastic containers for microwaving if the oven is still hot from using the **GRILL** mode, **CONVECTION** mode, **DUAL** mode, and **AUTO COOK** (except AUTO DEFROST) operation, because they may melt. Plastic containers must not be used during above modes unless the container manufacturer says they are suitable.

### NOTE:

If you are unsure how to connect your oven, please consult an authorised, qualified electrician.


Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the correct electrical connection procedure.

Water vapour or drops may occasionally form on the oven walls or around the door seals and sealing surfaces. This is a normal occurrence and is not an indication of microwave leakage or a malfunction.



## INSTALLATION

1. Remove all packing materials from the inside of the oven cavity. Discard the loose polythene sheet from between the door and cavity. Remove the feature sticker, if attached, from the outside of the door.

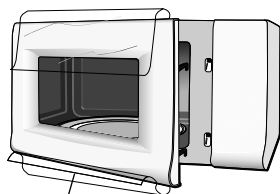


Remove this film.

2. Check the oven carefully for any signs of damage.
3. Place the oven on a flat, level surface strong enough to support the oven's weight plus the heaviest item likely to be cooked.

**4. The oven door may become hot during cooking. Place or mount the oven so that the bottom of the oven is 85 cm or more above the floor. Keep children away from the door to prevent them burning themselves.**

5. Ensure there is a minimum of free space above the oven of 19 cm.

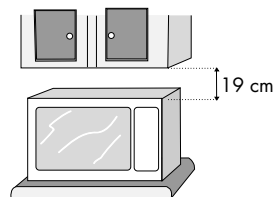

6. Securely connect the plug of the oven to a standard earthed (grounded) household electrical outlet.



## BEFORE OPERATION



Your oven has an "ENERGY SAVE MODE".

1. Plug in the oven. Nothing will appear on the display at this time.
2. Open the door.  
The oven display will show "ENERGY SAVE MODE TO GO OUT OF ENERGY SAVE MODE SET LANGUAGE" in 6 languages.
3. Close the door.
4. Press the STOP button. The display will show ".0".

NOTE: At this time English is selected initially. If you keep the energy save mode, go to step 7.

If you want to change the language, press the LANGUAGE button, in this case the "Energy Save mode" will be off.

5. Select the language (See below).
6. Set the clock (See page 9).
7. Heat the oven without food (See page 10).

### COOKING HINTS:

The oven has an 'Information Display System' which offers you step by step instructions to easily guide you through each feature, and enable you to gain information in your desired language. The oven has an **INFORMATION** button for getting instructions for each button. Indicators will appear in the display, after pressing a button, to inform you of the next operation step.

**NOTE:** In "ENERGY SAVE MODE" the oven will only operate in the English language.

## SELECTING THE LANGUAGE




Press <b>LANGUAGE</b> button	LANGUAGE
once	ENGLISH
twice	DEUTSCH
3 times	NEDERLANDS
4 times	FRANÇAIS
5 times	ITALIAN
6 times	ESPAÑOL

The oven comes set for English. You can change the language. To change, press the **LANGUAGE** button until the desired language is displayed. Then press the **+1 min** /**START** button.

### Example:

Suppose you want to select **Italian**:

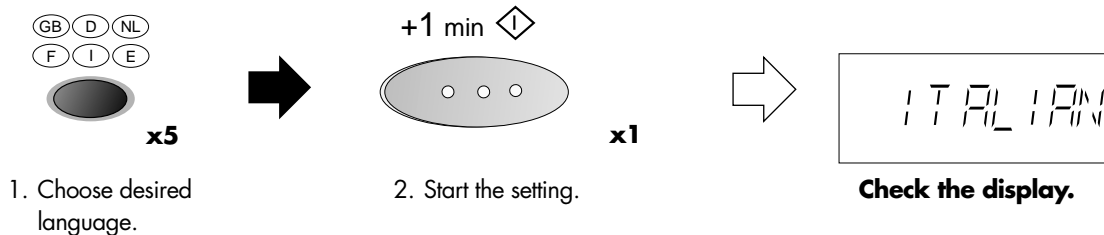


**NOTE:** If you set the language "Energy Save Mode" does not work.

ENGLISH



## USING THE STOP BUTTON

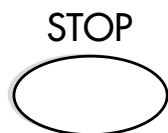

Use the **STOP** button to:

1. Erase a mistake during programming.
2. Stop the oven temporarily during cooking.
3. Cancel a programme during cooking, press the **STOP** button twice.



## ENERGY SAVE MODE

**Your oven comes set for the energy save mode with ENGLISH language only.**

If you do nothing for 2 minutes after a preceding operation, i.e. plugging in or at the end of cooking, the power will go off automatically. To restore power on, open and then close the door.

 
 
 

**If you set the language using the LANGUAGE button or set the clock, energy save mode does not work.**

To start energy save mode, follow the instructions below.

### Example:

To start the energy save mode, (the current time is 23:35):

1. Make sure the correct time appears on the display.
2. Press the **CLOCK SETTING** button.
3. Adjust the display to 0 by rotating the **TIME/WEIGHT** dial.
4. Press **+1 min** / **START** button. The power will be off and the display will show nothing.

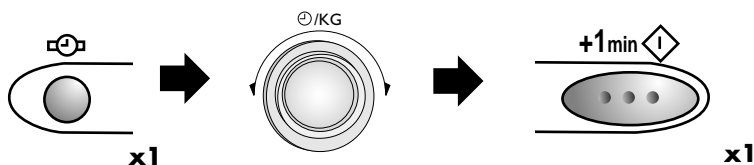

## SETTING THE CLOCK



There are two setting modes: 12 hour clock and 24 hour clock.

### Step 1



x1

### Step 2




x2

1. To set the 12 hour clock, press the **CLOCK SETTING** button once as in Step 1.
2. To set the 24 hour clock, press the **CLOCK SETTING** button twice as in Step 2.

### Example:

To set the 24 hour clock to 23:35.

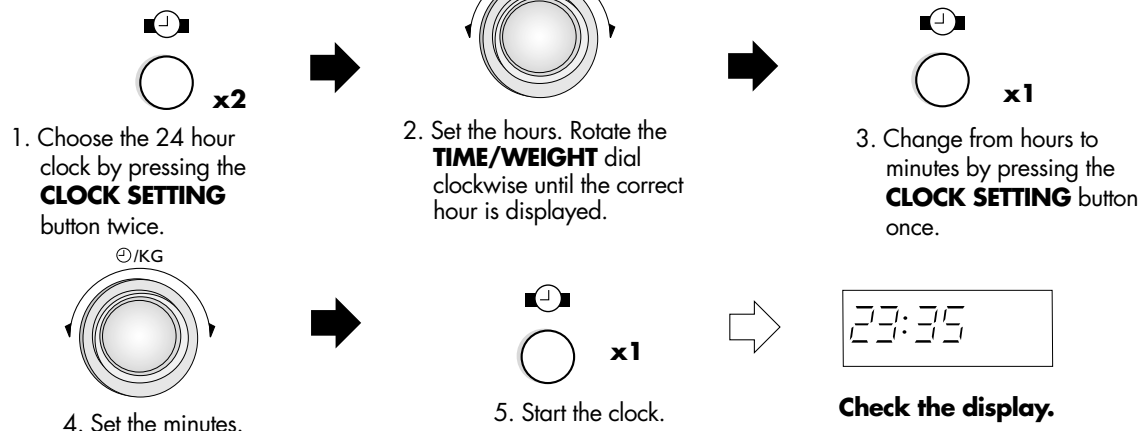

### NOTES:

1. You can rotate the **TIME/WEIGHT** dial clockwise or counterclockwise.
2. Press the **STOP** button if you make a mistake during programming.
3. If the oven is in cooking mode and you wish to know the time of day, touch the **CLOCK SETTING** button. As long as your finger is touching the button, the time of day will be displayed.
4. If the electrical power supply to your microwave oven is interrupted, plug in the oven again, then open and close the door. The display will show "ENERGY SAVE MODE TO GO OUT OF ENERGY SAVE MODE SET LANGUAGE" in 6 languages. If this occurs during cooking, the programme will be erased. The time of day will also be erased.
5. When you want to reset the time of day, follow the above example again.
6. If you do not set the clock, press the **STOP** button once. will appear on the display. When the operation of the oven is finished, will reappear on the display instead of the time of day.
7. If you set the clock, energy save mode does not work.

## MICROWAVE POWER LEVELS



Your oven has 5 power levels. To choose the power level, follow the advice given in the cookbook section.

**900 WATT = 100 % output**

**270 WATT = 30 % output**

**630 WATT = 70 % output**

**90 WATT = 10 % output**

**450 WATT = 50 % output**

- To select microwaving, rotate the **COOKING MODE** dial to the microwave setting.
- To set the power, touch the **MICROWAVE POWER LEVEL** button until the desired level is displayed.
- If the **MICROWAVE POWER LEVEL** button is touched once, will be displayed. If you miss your desired level, continue touching the **MICROWAVE POWER LEVEL** button until you reach the level again.
- If the level is not selected, the level 900 W (100 %) is automatically set.

ENGLISH



## MICROWAVE COOKING

Your oven can be programmed for up to 90 minutes. (90.00). The input unit of cooking (defrosting) time varies from 10 seconds to five minutes. It depends on the total length of the cooking (defrosting) time as shown on the table opposite:

### Cooking time:


0-5 minutes  
5-10 minutes  
10-30 minutes  
30-90 minutes

### Increasing unit:

10 seconds  
30 seconds  
1 minute  
5 minutes

### Example:

Suppose you want to cook for 2 minutes and 30 seconds at 630 W microwave power.

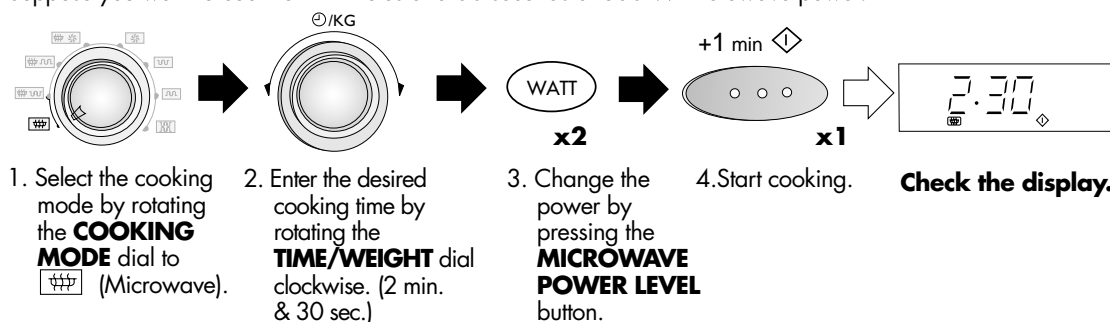

### NOTES:

- When the door is opened during the cooking process, the cooking time on the digital display stops automatically. The cooking time starts to count down again when the door is closed and the **+1 min** /**START** button is pressed.
- If you wish to know the power level during cooking, press the **MICROWAVE POWER LEVEL**

button. As long as your finger is pressing the **MICROWAVE POWER LEVEL** button, the power level will be displayed.

- You can rotate the **TIME/WEIGHT** dial clockwise or counterclockwise. If you rotate the dial counterclockwise, the cooking time will decrease from 90 minutes by degrees.




## HEATING WITHOUT FOOD

You may detect smoke or a burning smell when using the grill(s), dual grill or convection for the first time. This is normal and not a sign that the oven is out of order.

To avoid this problem, when first using the oven, operate both top and bottom grills without food for 20 minutes.

**IMPORTANT:** During grill operation, to allow smoke or smells to disperse open a window or switch the kitchen ventilation on. Make sure there is no food in the oven.

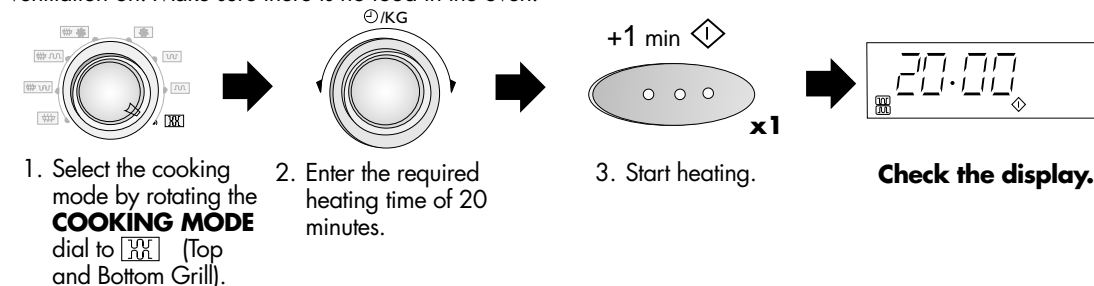

The oven will count down. When the oven has finished heating, open the door to cool the oven cavity.

### WARNING:

The oven door, outer cabinet and oven cavity will become hot. Take care to avoid burns when cooling the oven down after operation.

## GRILL COOKING




Your oven has 2 grill heating elements, and a combination of 3 grill cooking modes. Select the desired grill mode first by rotating the **COOKING MODE** dial as indicated below, then input the time.

COOKING MODE	GRILL HEATING ELEMENT IN USE	DISPLAY
	TOP GRILL	TOP GRILL
	BOTTOM GRILL	BOTTOM GRILL
	TOP AND BOTTOM GRILLS together	TOP AND BOTTOM

### Example:

Suppose you want to cook for 15 minutes using the TOP GRILL only.

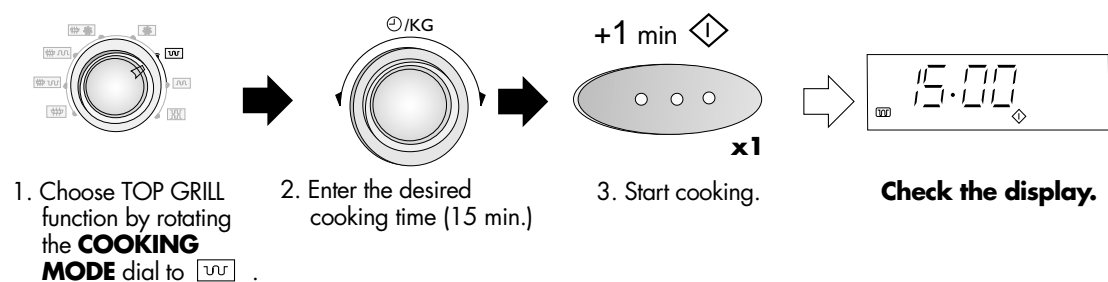

### NOTES:

1. The high or low racks are recommended when grilling. (Please refer to Auto Cook Chart; pages 21-23).
2. You may detect smoke or a burning smell when using the grill for the first time, this is normal and not a sign that the oven is out of order. Please see heating without food on the previous page.
3. After cooking the oven will automatically cool and the display may show "NOW COOLING".

### WARNING:

**The oven cavity, door, outer cabinet, turntable, racks, dishes and especially the bottom heater will become very hot, use thick oven gloves when removing the food or turntable from the oven to prevent burns.**




## CONVECTION COOKING

This microwave oven has 10 pre-set oven temperatures which use a combination of the top and bottom grills.

Press <b>CONVECTION</b> button	1	2	3	4	5	6	7	8	9	10
Oven Temp (° C)	250	230	220	200	180	160	130	100	70	40

### Example 1: To cook with preheating

Suppose you want to pre-heat to 180° C and cook for 20 minutes at 180° C.

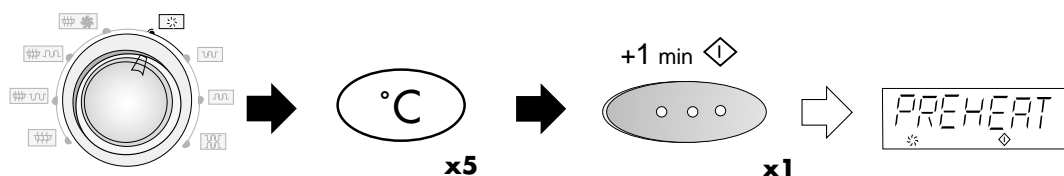


1. Select the cooking mode by rotating the **COOKING MODE** dial to .

2. Enter the desired preheat temperature by pressing the **CONVECTION** button five times. The display will show 180° C.

3. Press the **+1 min** **/START** button to start pre-heating.

When the pre-heated temperature has been reached the audible signal sounds, the display will show 180° C, open the door and place the food inside the oven. Close the door.

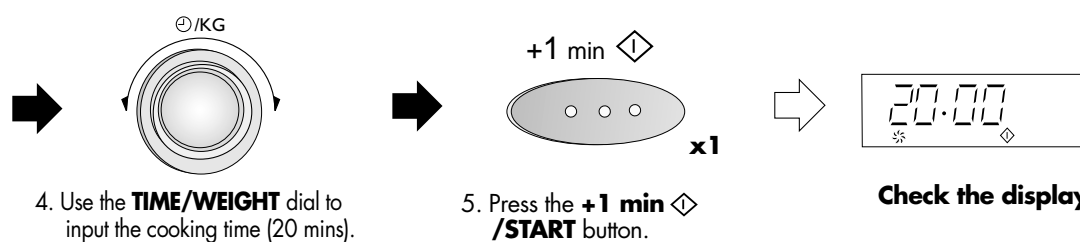

4. Use the **TIME/WEIGHT** dial to input the cooking time (20 mins).

5. Press the **+1 min** **/START** button.

**Check the display.**

### NOTES:


1. After preheating, if you want to cook at a different temperature press the **CONVECTION** button until the desired setting appears on the display. In the example above, to change the temperature you would press the **CONVECTION** button after entering the cooking time.
2. When the oven reaches the programmed preheating temperature, it will automatically hold at the pre-heated temperature for 30 minutes. After 30 minutes the display will change to time of day, if set. The selected convection programme will be cancelled.
3. After cooking the oven will automatically cool and the display will show "NOW COOLING".

## CONVECTION COOKING



### Example 2: To cook without preheating

Suppose you want to cook at 250° C for 20 minutes.

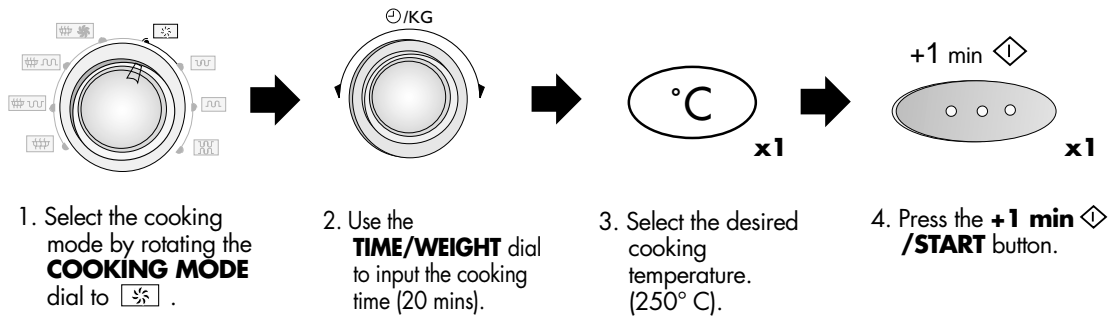

**Check the display.**

### NOTES:

1. After cooking the oven will automatically cool and the display will show "NOW COOLING".
2. To change the convection temperature, press the **CONVECTION** button until the desired temperature appears on the display.

### WARNING:

**The oven cavity, door, outer cabinet, turntable, racks, dishes and especially the bottom heater will become very hot, use thick oven gloves when removing the food or turntable from the oven to prevent burns.**



## DUAL COOKING

Your oven has 3 **DUAL** cooking modes combining the heat of the grill(s) with the power of the microwave. To select the **DUAL** cooking mode rotate the **COOKING MODE** dial to the desired setting, then choose the cooking time. Generally, dual cooking time shortens the total cooking time.


COOKING MODE		Cooking method	Initial microwave power
DUAL 1		Convection 250° C	270 W
DUAL 2		Top Grill	270 W
DUAL 3		Bottom Grill	270 W

### NOTES: The power settings are variable:

- DUAL 1: The oven temperature can be changed from 40° C to 250° C in ten levels.  
Microwave power levels can be changed from 90 W - 450 W in three levels.
- DUAL 2 & 3: Microwave power levels can be changed from 90 W - 900 W in five levels.

### Example 1:

Suppose you want to cook for 20 minutes on DUAL 1, using 90 W microwave power and 200° C convection.

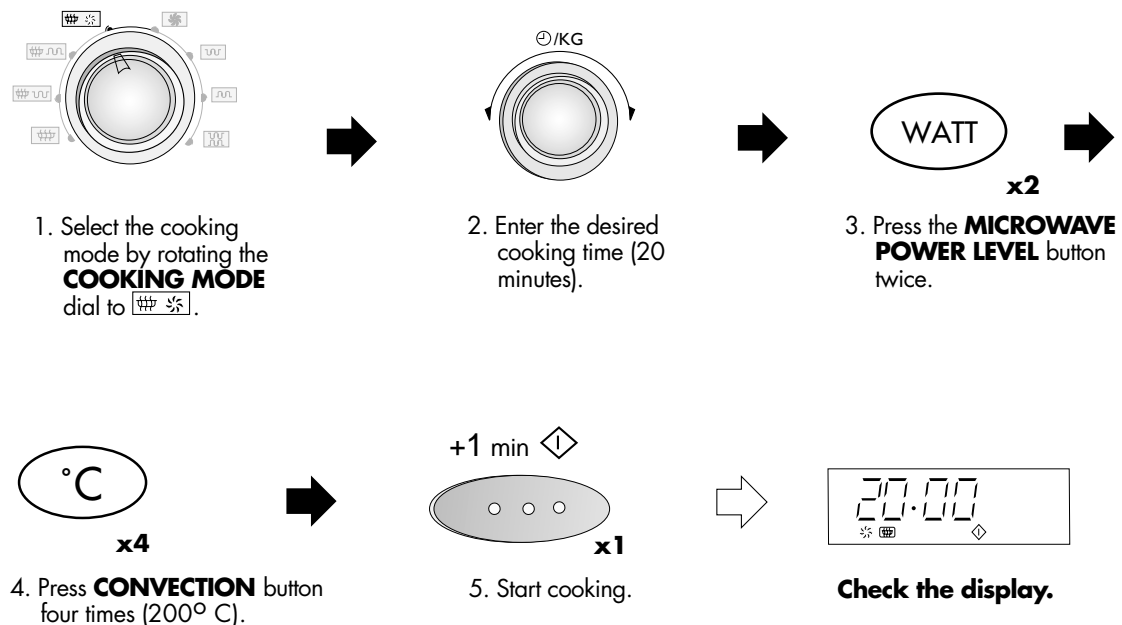





## DUAL COOKING





### Example 2:

Suppose you want to cook for 20 minutes on DUAL 2, using 90 W microwave power and TOP GRILL.

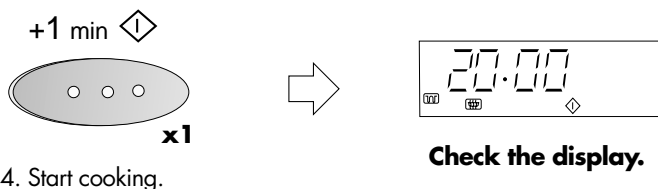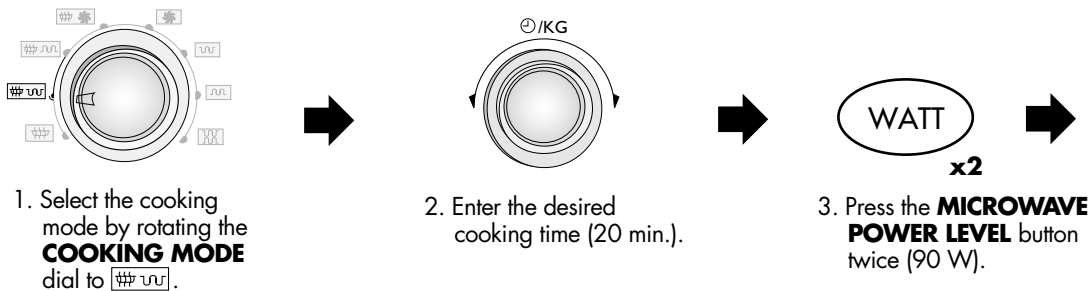

### Example 3:

Suppose you want to cook for 20 minutes on DUAL 3, using 90 W microwave power and BOTTOM GRILL.

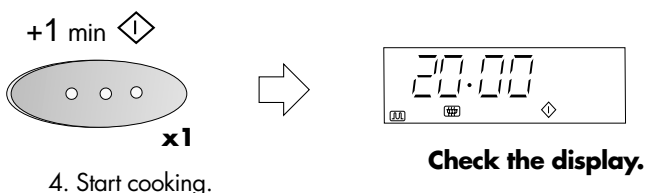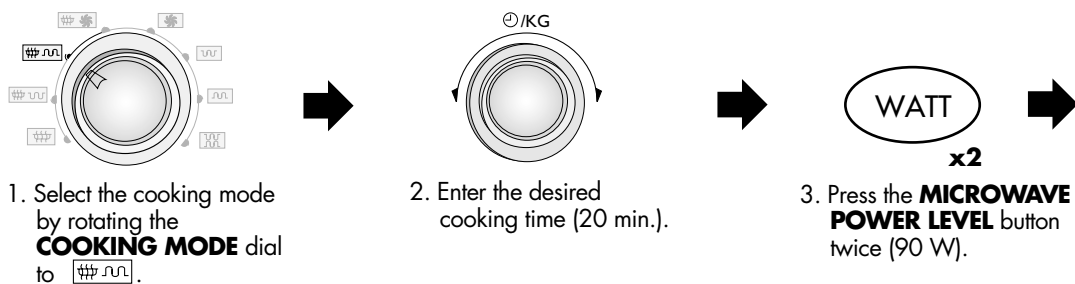

**NOTE:** After cooking, the display may show "NOW COOLING". To clear it, press the **STOP** button.

### WARNING:

The oven cavity, door, outer cabinet, turntable, racks, dishes and especially the bottom heater will become very hot, use thick oven gloves when removing the food or turntable from the oven to prevent burns.



## OTHER CONVENIENT FUNCTIONS

### 1. LESS (▼) / MORE (▲) button

The **LESS** (▼) and **MORE** (▲) buttons allow you to decrease or increase programmed setting times easily, (for a less well or more well cooked result), used for automatic operation or when cooking is underway.

#### a) Changing the pre-programmed time setting:

##### Example:

Suppose you want to cook 0,9 kg Roast Chicken using the **AUTO COOK** and **MORE** button.

##### NOTES:

To cancel **LESS** or **MORE** press the same button again.

To change **MORE** to **LESS** simply press the **LESS** button.

To change **LESS** to **MORE** simply press the **MORE** button.

#### b) Changing the heating time while the oven is operating:


The cooking time can be decreased or increased in 1 minute steps each time the **LESS** (▼) and **MORE** (▲) buttons are pressed.

##### Example:



x5

Choose the **AUTO COOK** menu for Roast Chicken, by pressing the **AUTO COOK** button five times.

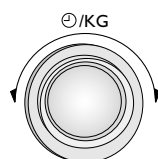

Enter the amount (0,9 kg).



x1

 
Choose the desired result (well cooked) by pressing the **MORE** button once.



+1 min



Start to cook.



Check the display.

## OTHER CONVENIENT FUNCTIONS



### 2. +1min function


The **+1min** /**START** button allows you to operate the two following functions:

#### a) 1 minute cooking

You can cook on your desired cooking mode for 1 minute without entering the cooking time.

#### Example:

Suppose you want to cook for 1 minute on 630 W microwave power.

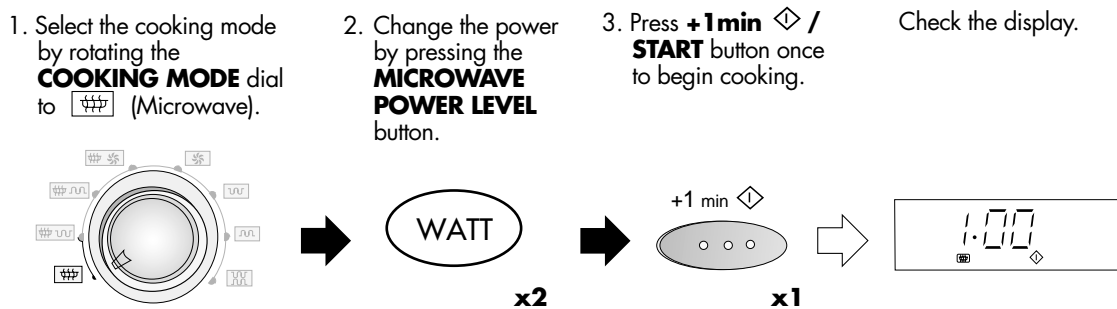

#### NOTES:

1. You can use this function for manual cooking only.
2. When the **COOKING MODE** dial is on microwave ( ) and you press the **+1min** /**START** button, the microwave power is always 900 watt.  
When the **COOKING MODE** dial is on dual ( , or ) and you press the **+1min** /**START** button, the microwave power is always 270 watt.  
When the **COOKING MODE** dial is on convection or dual 1 ( or ) and you press the **+1min** /**START** button, the convection temperature is always 250° C.
3. To avoid misuse by children the **1 minute cooking** function can be used only within 2 minutes after the preceding operation, ie closing the door or pressing the **STOP** button.

#### b) Extend the cooking time

You can extend the cooking time in multiples of one minute if the button is pressed while the oven is in operation.



## OTHER CONVENIENT FUNCTIONS

### 3. TO CHECK SETTINGS WHILE THE OVEN IS OPERATING

You can check the power level and the actual oven temperatures ie: when pre-heating.

#### TO CHECK THE POWER LEVEL:

To check the microwave power level during cooking press the **MICROWAVE POWER LEVEL** button. The oven continues to count down, although the display shows the power level.

As long as your finger is pressing the button, the power level will be displayed.



#### TO CHECK THE CONVECTION TEMPERATURE:

To check the convection temperature during cooking press the **CONVECTION** button. When the oven is pre-heating, you can check the actual oven temperature.

As long as your finger is pressing the button, the convection temperature in °C will be displayed.



### 4. INFORMATION button

Each button carries useful information. If you wish to get the information, press the **INFORMATION** button before pressing the desired button.

#### Example:

Suppose you want to get information about AUTO COOK menu number 5, Roast chicken:

#### NOTE:

1. The information message will be repeated twice, and then the display will show the time of day, if set.
2. If you want to cancel the information press the **STOP** button.



x1

 
 
 
 
 
 
 
 


x6



Choose the **INFORMATION** button function.

Press the **AUTO COOK** button once to select the AUTO COOK function. For AC-5 press the button five more times.



## AUTOMATIC OPERATION



**AUTOMATIC OPERATION** automatically works out the correct cooking mode and cooking time. You can choose from 2 **CAKE/BREAD** menus, 3 **PIZZA** menus, 8 **AUTO COOK** menus and 2 **AUTO DEFROST** menus.

**Warning:**

**For CAKE/BREAD, PIZZA and AUTO COOK:** The oven cavity, door, outer cabinet, turntable, racks, dishes and especially the bottom grill will become very hot. Use thick oven gloves when removing food or the turntable from the oven to prevent burns.


What you need to know when using this automatic function:

1. Menu can be input by pressing the **CAKE/BREAD**, **PIZZA**, **AUTO COOK** or **AUTO DEFROST** button until the desired menu number appears in the display.
2. The weight of the food can be input by rotating the **TIME/WEIGHT** dial until the desired weight is displayed.
  - Enter the weight of the food only. Do not include the weight of the container.
  - For food weighing more or less than weights given in the cooking chart, cook using manual programmes.
3. The programmed cooking times are average times. If you want to alter cooking times pre-programmed in the automatic operations, use the **LESS (▼)** or **MORE (▲)** button. See Page 16 for details.
  - For best results, follow cooking chart instructions.
4. To start cooking press **+ 1 min** **◇/START** button.

When action is required (e.g. to turn food over) the oven stops and the audible signals sound, the display shows the necessary action. To continue cooking, press the **+ 1 min** **◇/START** button.

The final temperature will vary according to the initial temperature. Check food is piping hot after cooking. If necessary, you can extend the cooking time and change the power level.

**NOTE:** Please refer to the menu label for list of AUTOMATIC menus and weight ranges.

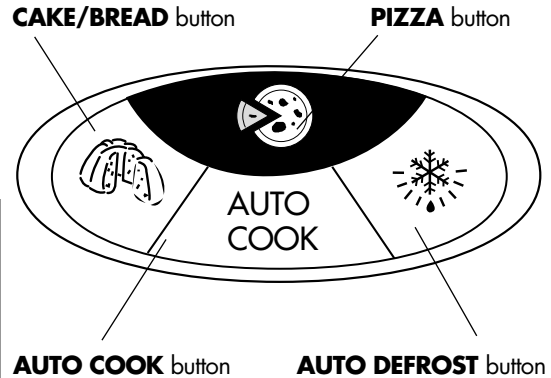


1.



**CAKE/BREAD** button

2.

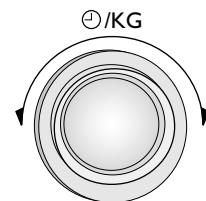

**TIME/WEIGHT** dial

3.



**LESS/MORE** buttons

4.

**+ 1 min** **◇**



**+ 1 min** **◇/START** button




## AUTOMATIC OPERATION

### Examples when using the Automatic functions:

The **CAKE/BREAD** or **PIZZA** buttons.

**Example 1:** Suppose you want to cook 0,3 kg of Chilled Pizza using the **PIZZA** button.

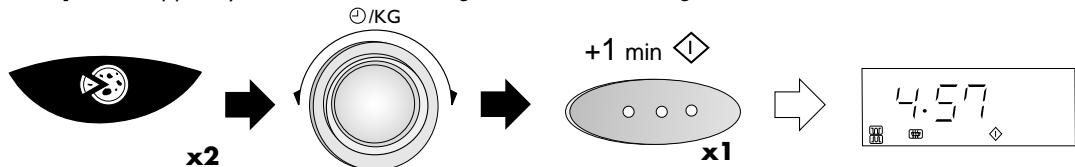

1. Choose the **PIZZA** menu No. 2 and cooking information will appear and the weight indicator will flash on the display.


2. Enter the amount, 0,3 kg will appear and the cook indicator will flash on the display.

3. Start to cook.

**Check the display.**

The **AUTO COOK** button or **AUTO DEFROST** button.

**Example 2:** Suppose you want to cook grill skewers (kebabs) weighing 0,8 kg.

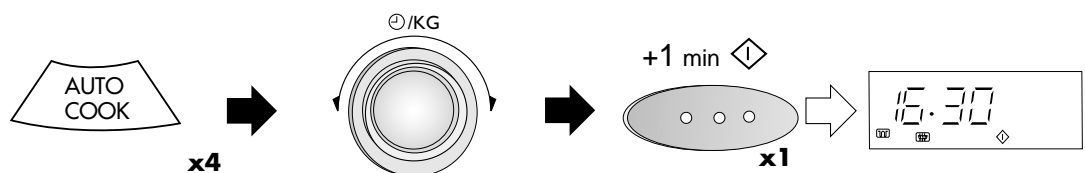

1. Choose the **AUTO COOK** menu No. 4 and cooking information will appear and the weight indicator will flash on the display.

2. Enter the amount, 0,8 kg will appear and the cook indicator will flash on the display.

3. Start to cook.

**Check the display.**

## PIZZA/QUICHE CHART



### No. 1

#### Frozen Pizza, Quiche

Quantity: 0,15 - 0,60 kg Pizza  
0,15 - 0,40 kg Quiche

Utensils: Direct on the turntable

Increasing unit: 50 g

Initial food Temp: -18° C, Frozen

Recommended menus:

Frozen pizzas, frozen quiches



#### Procedure:

- Remove the deep frozen pizza/quiche from the packaging and place on the turntable.
- For Quiche and thick base pizza, press the **MORE (▲)** button before pressing the **PIZZA** button.
- After cooking, place on a plate for serving.  
For quiche, let stand for 2 minutes.

### No. 2

#### Chilled Pizza

Quantity: 0,15 - 0,45 kg  
total weight

Utensils: Direct on the turntable

Increasing unit: 50 g

Initial food Temp: 5° C, Chilled

Recommended menus: Chilled pizzas



#### Procedure:

- Remove the ready prepared chilled pizza from the packaging and place on the turntable.
- After cooking, place on a plate for serving.

### No. 3

#### Fresh Pizza, Quiche

Quantity: 0,7 - 1,0 kg Pizza  
0,7 kg Quiche

Utensils: Direct on the turntable

Increasing unit: 100 g

Initial food Temp: 20° C, Room temperature

Recommended

menus: Homemade pizza/quiche.



#### Procedure:

- Prepare the pizza/quiche according to the recipes below.
- Place directly on the turntable.
- For Quiche, press the **MORE (▲)** button before pressing the **PIZZA** button.
- After cooking, place on a plate for serving.

#### PIZZA RECIPE

##### Ingredients:

300 g Approx. Ready prepared dough.  
(Ready mix or roll out dough)  
200 g Approx. Tinned tomatoes  
Basil, oregano, thyme, salt, pepper  
150 g Topping as desired.  
(eg. corn, ham, salami, pineapple)  
50 g Grated cheese

##### Procedure:

1. Prepare the dough according to the manufacturer's instructions. Roll out to size of turntable and place on the lightly greased turntable. Pierce the dough.
2. Drain the tomatoes and cut them into pieces. Season the tomatoes with the spices and spread on the dough. Put all other ingredients on the pizza and finally cover with the cheese.
3. Cook the pizza using the **PIZZA** button (No. 3).

#### QUICHE RECIPE

##### Ingredients:

200 g Puff pastry (frozen or chilled)  
3 Eggs (medium)  
200 g Cream or milk  
100 g Grated cheese (Emmenthal)  
50 g Ham

##### Procedure:


1. Defrost the pastry and roll it out to the size of the turntable, place on and pierce the dough.
2. Mix the eggs with the cream and the cheese together. Season with salt and pepper and pour over the pastry.
3. Sprinkle the ham over and cook using the **PIZZA** button (No. 3) and the **MORE (▲)** button.



## CAKE/BREAD CHART

### No. 1 Cake

Quantity: 0,5 - 1,5 kg  
 Utensils: Cake dish  
 Increasing unit: 100 g  
 Initial food Temp: 20° C, Room temperature  
 Recommended menus:  
 Carrot cake  
 Egg flip cake  
 Apple cake with cover

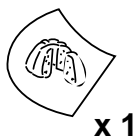

#### Procedure:

- Prepare the cake according to the SHARP Cook book. Place the cake dish directly on the turntable.
- Let the cake stand for approximately 10 minutes after baking.

### No. 2 Bread

Quantity: 0,3 - 1,5 kg,  
 Utensils: Baking tin  
 Increasing unit: 100 g  
 Initial food Temp: 20° C, Room temperature  
 Recommended menus:  
 Three-corn-bread  
 Party Bread  
 Ready mixture for bread and rolls



#### Procedure:

- Prepare the bread according to the SHARP cook book. Place the cake dish directly on the turntable.
- After baking, place the bread on a rack and allow it to cool down.

### HINT FOR CAKE/BREAD:

You can use ordinary black metal cake tins. If arcing occurs, put a saucer between the turntable and tins.



## AUTO COOK CHART

### No. 1 Gratin

Quantity: 0,5 - 1,5 kg  
 Utensils: Round glass dish  
 Increasing unit: 100 g  
 Initial food Temp: 20° C, Room temperature  
 Recommended menus:  
 Broccoli Potato Gratin with mushrooms,  
 Spinach gratin, Courgette-Noodle gratin



#### Procedure:

- Prepare the gratin referring to the recipe in the cookery book.
- Place the gratin on the turntable.
- After cooking, let the food stand wrapped in aluminium foil for approx. 5 minutes.

### No. 2 Gratinated Fish Fillet

Quantity: 0,6 - 1,2 kg  
 Utensils: Shallow, oval gratin dish, low rack  
 Increasing unit: 100 g  
 Initial food Temp: Fish 5° C  
 Sauce 20° C  
 Recommended menus:  
 See next page.



#### Procedure:

- Prepare referring to the recipes below.
- Place on the low rack.
- After cooking, let the food stand in aluminium foil for approx. 5 minutes.





## Recipe 1 Fish Gratin Italian Style

### Ingredients:

600 g	Rose Fish Fillet
250 g	Mozarella
250 g	tomatoes
2 tbsp	anchovy butter salt and pepper
1 tbsp	chopped basil juice of 1/2 lemon
2 tbsp	chopped mixed herbs
75 g	grated Gouda (45 % fat)

### Procedure:

- Wash the fish and dry. Sprinkle with lemon juice and salt and grease with the anchovy butter.
- Place in an oval gratin dish (32 cm).
- Sprinkle the Gouda over the fish.
- Wash the tomatoes and remove the stalks. Cut into slices and place on top of the cheese.
- Season with salt, pepper and the mixed herbs.
- Drain the mozzarella, cut into slices and place on the tomatoes. Sprinkle the basil on top.
- Place the gratin dish on the low rack and cook on AUTO COOK No. 2 Fish Gratin.

**NOTE:** After cooking remove the fish from the gratin dish and stir in some sauce thickening powder. Cook again for 1-2 minutes on 900 W power.

## Recipe 2 Fish Gratin "Esterhazy"

### Ingredients:

600 g	Rose Fish Fillet
250 g	leeks
100 g	carrot
50 g	onion
1 tbsp	butter salt and pepper nutmeg
2 tbsp	lemon juice
125 g	crème fraîche
100 g	grated Gouda (45 % fat)

### Procedure:

- Wash the leeks and divide in 2 parts from top to bottom. Cut into thin strips.
- Peel the onion and carrot and cut into thin strips.
- Put the vegetables, butter and the spices into a casserole dish and mix well. Cook for 5-6 minutes on 900 W power. Stir once in-between cooking.
- In the meantime wash the fish fillet, dry and sprinkle with lemon juice and salt.
- Mix the crème fraîche into the vegetables and season again.
- Put half of the vegetables in an oval gratin dish (32 cm). Place the fish on top and cover with the remaining vegetables.
- Spread the Gouda on the top and place on the low rack and cook on AUTO COOK No. 2 Fish Gratin.

## Recipe 3 Fish Broccoli Gratin

### Ingredients:

500 g	fish fillets
2 tbsp	lemon juice
	salt
2 tbsp	butter
2 tbsp	flour
300 ml	milk
	chopped dill, pepper
250 g	frozen broccoli
100 g	grated Gouda (45 % fat)

### Procedure:

- Wash and dry the fish. Sprinkle with lemon juice and salt.
- Heat together butter and flour in a round casserole without cover for approx. 1-1 1/2 minutes on 900 W power.
- Add the milk and stir very well. Cook again without cover for 3-4 minutes on 900 W power. After cooking stir again and season with dill, salt and pepper.
- Place the frozen broccoli into a casserole dish and defrost for 4-6 minutes on 900 W power.
- Place the broccoli into a gratin dish (32 cm) and put the fish on top. Season again.
- Pour the sauce over and finally sprinkle over the cheese.
- Place on the low rack and cook on AUTO COOK No. 2 Fish Gratin.

**Tip:** Sprinkle some almond flakes over the Fish Gratin shortly before the end of the cooking time.

## No. 3 Roast Pork

Quantity:	0,6 - 2,0 kg
Utensils:	Low rack
Increasing unit:	100 g
Initial food Temp:	5° C, Chilled
Ingredients:	1 kg rolled lean pork, 1 garlic clove crushed 2 tbsp oil 1 tbsp paprika, sweet a little cumin powder 1 tsp salt

Recommended menus: Rolled lean pork



### Procedure:

- Lean roast pork is recommended.
- Mix all ingredients and spread them onto the pork.
- Place the pork on the low rack.
- When audible signal sounds, turn the food over.
- After cooking, let the food stand wrapped in aluminium foil for approximately 10 minutes.



## AUTO COOK CHART

### No. 4 Grill skewers

Quantity: 0,2 - 0,8 kg  
Utensils: High rack  
Increasing unit: 100 g  
Initial food Temp: 5° C, Chilled  
Recommended menus: Coloured meat skewers



#### Procedure:

- Prepare the skewers. (You can refer to the cookery book).
- Put the skewers on the high rack.
- When audible signal sounds, turn the food over.
- After cooking place on a plate and serve.

### No. 5 Roast Chicken

Quantity: 0,9 - 1,8 kg  
Utensils: Low rack  
Increasing unit: 100 g  
Initial food Temp: 5° C, Chilled  
Ingredients: 1 kg grilled chicken  
1/2 tsp salt and pepper  
1 tsp paprika, sweet  
2 tbsp oil  
Recommended menus: Roast Chicken



#### Procedure:

- Mix the ingredients and spread on chicken.
- Pierce the skin of the chicken.
- Place the chicken on the low rack with breast side down.
- When audible signal sounds, turn the food over.
- After cooking, let the food stand for approx. 3 minutes in the oven.

### No. 6 French Fried Potatoes

Quantity: 0,2 - 0,4 kg  
Utensils: Turntable  
Increasing unit: 50 g  
Initial food Temp: -18° C, Frozen  
Recommended menus: Thin and thick frozen French Fried Potatoes.  
Potato croquettes.



#### Procedure:

- Remove the frozen French Fried Potatoes from the package and place on the turntable.
- When cooking thick French Fries press the **MORE (▲)** button.
- When cooking potato croquettes press the **LESS (▼)** button.
- After cooking remove from the turntable and serve.

### No. 7 Fish Fingers/ Poultry meat pieces

Quantity: 0,2 - 0,5 kg  
Utensils: Turntable  
Increasing unit: 100 g  
Initial food Temp: -18° C, Frozen  
Recommended menus: Fish Fingers, Poultry meat pieces (Chicken Nuggets).



#### Procedure:

- Grease the turntable lightly.
- Remove the deep frozen fish fingers/poultry meat pieces from the packaging and place them on the turntable.
- After cooking, place on a plate for serving.

### No. 8 Frozen Baguettes/Ciabatta

Quantity: 0,15 - 0,5 kg  
Utensils: Turntable  
Increasing unit: 50 g  
Initial food Temp: -18° C, Frozen  
Recommended menus: Baguettes with pizza topping.  
Ciabatta with pizza topping.



#### Procedure:

- Remove the baguette/ciabatta from the packaging and place on the turntable.
- For ciabatta, use the **LESS (▼)** button.
- After cooking place on a plate for serving.

## AUTO DEFROST CHART



### No. 1

#### Easy Defrost 1, Poultry

Quantity: 0,9 - 2,0 kg  
 Utensils: (see note below)  
 Increasing unit: 100 g  
 Initial food Temp: -18° C



#### Procedure:

- Put a plate up side down on the turntable and place the poultry on it.
- When audible signal sounds, turn over. Shield the defrosted parts with aluminium foil if necessary.
- When audible signal sounds, turn over and shield again.
- After defrosting, let stand wrapped in aluminium foil for 30-90 minutes, until thoroughly defrosted.

### No. 1

#### Easy Defrost 1, Chicken legs, Steak, Chops, Fish fillet

Quantity: 0,2 - 1,0 kg  
 Utensils: (see note below)  
 Increasing unit: 100 g  
 Initial food Temp: -18° C



#### Procedure:

- Position the food on a plate in a single layer with thinner parts to the centre. If food is frozen together, try to separate as soon as possible.
- When audible signal sounds, turn over and re-arrange. Shield the defrosted parts with aluminium foil if necessary.
- When audible signal sounds turn over, rearrange and shield again.
- After defrosting, let stand wrapped in aluminium foil for 10-30 minutes, until thoroughly defrosted.

### No. 2

#### Easy Defrost 2, Meat joint

Quantity: 0,6 - 2,0 kg  
 Utensils: (see note below)  
 Increasing unit: 100 g  
 Initial food Temp: -18° C




#### Procedure:

- Put a plate upside down on the turntable and place the meat on it.
- When audible signal sounds, turn over. Shield the defrosted parts with aluminium foil if necessary.
- When audible signal sounds turn over and shield again.
- After defrosting, let stand wrapped in aluminium foil for 30-90 minutes, until thoroughly defrosted.

### NOTE:

1. Chicken legs, Steaks, Chops and Fish fillet should be frozen in one layer.
2. For shielding the defrosted parts, use small, flat pieces of aluminium foil.
3. The poultry should be cooked immediately after standing.
4. Arrange the food in the oven as shown:

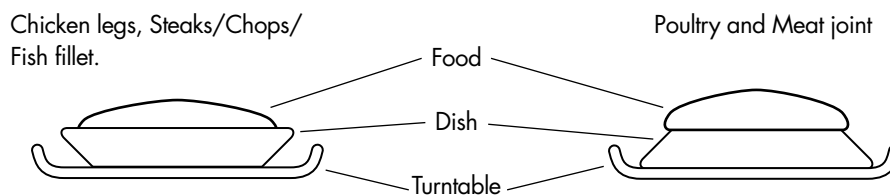



## CARE AND CLEANING

**CAUTION! DO NOT USE COMMERCIAL OVEN CLEANERS, ABRASIVE, HARSH CLEANERS OR SCOURING PADS ON ANY PART OF YOUR MICROWAVE OVEN.**

**WARNING!**

After **GRILL, DUAL, CONVECTION** and **AUTOMATIC OPERATION** (except Auto Defrost) modes, the oven cavity, door, oven cabinet and accessories will become very hot. Before cleaning, make sure they are completely cool.

### Oven exterior

The outside of your oven can be cleaned easily with mild soap and water. Make sure the soap is wiped off with a moist cloth, and dry the exterior with a soft towel.

### Oven controls

Open the door before cleaning to de-activate the oven controls. Care should be taken when cleaning the oven control. Using a cloth dampened with water only, gently wipe the panel until it becomes clean. Avoid using excessive amounts of water. Do not use any sort of chemical or abrasive cleaner.

### Oven Interior

1. For cleaning, wipe any splatters or spills with a soft damp cloth or sponge after each use while the oven is still warm. For heavier spills, use a mild soap and wipe several times with a damp cloth until all residues are removed.

Do not remove the waveguide cover.

2. Make sure that mild soap or water does not penetrate the small vents in the walls which may cause damage to the oven.
3. Do not use spray type cleaners on the oven interior.
4. Heat up your oven regularly by using both heating elements, refer to "Heating without food" on page 10. Remaining food or fat splashed can cause smoke or bad smell.

### Turntable and Turntable support

Remove the turntable from the oven. Wash the turntable in mild soapy water. Dry with a soft cloth. The turntable is dishwasher safe.

### Low Rack and High Rack

These should be washed in a mild washing up liquid solution and dried. High and Low racks are dishwasher safe.

### Door

To remove all trace of dirt, regularly clean both sides of the door, the door seals and adjacent parts with a soft, damp cloth.

## SERVICE CALL CHECK



### PLEASE CHECK THE FOLLOWING BEFORE CALLING FOR SERVICE.

#### 1. Power Supply

Check the power plug is properly connected to a suitable wall outlet.

Check the line fuse/circuit breaker is functioning properly.

2. When the door is opened, does the oven lamp light? YES \_\_\_\_\_ NO \_\_\_\_\_

3. Place a cup of water (approx. 150 ml) in the oven and close the door securely.

Set the cooking mode to microwave cooking mode.

Programme the oven for one minute on 900 W power and start the oven.

Does the oven lamp light? YES \_\_\_\_\_ NO \_\_\_\_\_

Does the turntable rotate? YES \_\_\_\_\_ NO \_\_\_\_\_

**NOTE:** The turntable turns in either direction.

Does the ventilation work? YES \_\_\_\_\_ NO \_\_\_\_\_

 
(Place your hand over the ventilation openings and check for air flow.)

After 1 minute does the signal sound? YES \_\_\_\_\_ NO \_\_\_\_\_

Does cooking in progress indicator go off? YES \_\_\_\_\_ NO \_\_\_\_\_

Is the water warm after the above operation? YES \_\_\_\_\_ NO \_\_\_\_\_

4. Take the cup out of the oven and close the door.

Set the **GRILL** cooking mode  using the top and bottom grills for 3 minutes.

 
 

 
 
After 3 minutes do both grill heating elements become red? YES \_\_\_\_\_ NO \_\_\_\_\_

If you answer "NO" to any of the above questions, call a Service Technician appointed by SHARP and report the results of your check. See inside back cover for details of address.

**IMPORTANT:** If the display shows nothing even if the power plug is properly connected, the energy save mode should carry on. To release it, open and then close the oven door. See page 8.

#### NOTES:

- If you cook the food over the standard time with only the same cooking mode, the power of the oven will lower automatically to avoid overheating. (The microwave power level will be reduced and the grill heating elements will begin to light on and off.)

Cooking mode	Standard time
Microwave 100 % cooking	20 min.
Grill cooking	
Top grill 	30 min.
Bottom grill 	45 min.
Top grill + bottom grill 	Top grill - 15 min. Bottom grill - 15 min.
Dual 2  (900 watt microwave power only)	Micro - 20 min. Top grill - 15 min.
Dual 3  (900 watt microwave power only)	Micro - 20 min. Bottom grill - 15 min

- After **GRILL** (using both heating elements), **DUAL**, **CONVECTION** and **AUTOMATIC OPERATION** (except **AUTO DEFROST**), the cooling fan will run and "NOW COOLING" will appear on the display. Also, when you press the **STOP** button and open the door during these cooking modes, the cooling fan will run; you may, therefore, feel air blowing from the ventilation openings.



## SPECIFICATIONS

AC Line Voltage		: 230 V, 50 Hz, single phase
Distribution line fuse/circuit breaker		: Minimum 16 A
AC Power required:	Microwave	: 1.45 kW
	Bottom Grill	: 0.55 kW
	Grill	: 1.05 kW
	Bottom Grill/Microwave	: 2.05 kW
	Top Grill/Microwave	: 2.55 kW
	Top and Bottom Grills	: 1.55 kW
	Convection	: 1.58 kW
	Triple Function	: 2.95 kW
Output power:	Microwave	: 900 W (IEC 705)
	Top Grill	: 1 kW
	Bottom Grill	: 0.5 kW
	Convection	: 1.5 kW
Microwave Frequency		: 2450 MHz
Outside Dimensions		: 520 mm (W) x 309 mm (H) x 488 mm (D)
Cavity Dimensions		: 349 mm (W) x 207 mm (H) x 357 mm (D)
Oven Capacity		: 26 litres
Turntable		: ø325 mm, metal
Weight		: 20 kg
Oven lamp		: 25 W/240 - 250 V

This oven complies with the requirements of Directives 89/336/EEC and 73/23/EEC as amended by 93/68/EEC.

SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE AS PART OF  
CONTINUOUS IMPROVEMENT

## ÖSTERREICH

Bei einer Reklamation Ihrer SHARP Mikrowelle wenden Sie sich bitte an Ihren Fachhändler oder an eine der nachfolgend aufgeführten SHARP SERVICE Niederlassungen.

**Manfred Mayer GmbH**, Stipcakgasse 6, 1234 Wien, Phone: 01-6093120, Fax: 01-6993629 / **MCL-Service GmbH**, Deutschstr. 19, 1232 Wien, Phone: 01-6168800, Fax: 01-6168800-15 / **Karl Rother**, Simmeringer Hauptstr. 11, 1110 Wien, Phone: 01-7498432, Fax: 01-7498432-12 / **Roland Göschl**, Bayerhamerstr. 12c, 5020 Salzburg, Phone: 662-882307, Fax: 662-881926 / **Franz Schuhmann**, Gablonzerweg 18, 4030 Linz, Phone: 732-382280, Fax: 732-382280-8 / **Arnold Moser**, An der Heufurt 28, 6900 Bregenz, Phone: 5574-75777, Fax: 5574-75777 / **Anton Reitmeir**, Leopoldstr. 57, 6020 Innsbruck, Phone: 512-562277, Fax: 512-562277 / **Scheuermann**, Rennsteinerstr. 8, 9500 Villach, Phone: 4242-21174, Fax: 4242-21174 / **Pichler**, Am Wagrain 342, 8055 Graz, Phone: 316-291292, Fax: 316-291292 / **Audio Video Service**, Sonnengasse 13, 9020 Klagenfurt, Phone: 463-43114, Fax: 463-43113

## BELGIUM

En cas d'une réclamation concernant une four à micro-onde SHARP, nous vous prions de vous adresser à votre spécialiste ou à une adresse des SHARP Services suivantes.

Indien uw magnetron problemen geeft kunt u zich wenden tot uw dealer of een van de onderstaande Sharp service centra.

**AVTC**, Kleine Winkellaan 54, 1853 Strombeek-Bever, Phone: 02/2674019, Fax: 2679670,

**ETS HENROTTE**, Rue Du Campinaire 154, 6240 Farciennes, Phone: 071/396290, Fax: 391237

**Nouvelle Central Radio (N.G.R)** Rue des Jons 15 L-1818 HOWALD Phone: 00352404078, Fax: 2402085

## NEDERLAND

Indien uw magnetron problemen geeft kunt u zich wenden tot uw dealer of naar onderstaand Sharp Service Centrum.

**SHARP ELECTRONICS BENELUX BV**, Helpdesk, Postbus 900, 3990 DW Houten, Telefoon: 09-007427728, Fax: 030-6359621

## DEUTSCHLAND

Bei einer Reklamation Ihrer SHARP Mikrowelle wenden Sie sich bitte an Ihren Fachhändler oder an eine der nachfolgend aufgeführten SHARP SERVICE Niederlassungen.

**01067 Dresden**, Gehado Service GmbH, Webergasse 2-4, Tel: 0351-5966-254, Fax: -5966244 / **03226 Vetschau**, Bernd Mindach, Juri-Gagarin-Str. 7-9, Tel: 035433-2125 / **04159 Leipzig**, Rudolph Franz, Elli-Voigt-Str. 1, Tel: 0341-581469, Fax: -581469 / **04430 Bienitz**, OT Gehado Service GmbH Ringstraße 176 Tel: 034205-675/0 Fax: 67544 / **04600 Altenburg**, Mechanik Altenburg, Dostoiewskistr. 17a, Tel: 03447-311102, Fax: -311248 / **06217 Merseburg**, Merseburger Haushaltsg. GmbH, Gotthardstr. 23, Tel: 03461-210290, Fax: -216891 / **06295 Eisleben**, Rudolf Schwarzbach, Hallesche Str. 36, Tel: 03475-3079 / **06618 Naumburg**, Hausgeräte Service, Wenzelstr. 15, Tel: 03445-2016, Fax: -2016 / **06618 Naumburg**, Elektro Schröter, Postring 11-12, Tel: 03445-2960 / **06844 Dessau**, Dessau Elektrik GmbH, Albrechtstr. 116-118, Tel: 0340-213331, Fax: -213332 / **07407 Rudolfsstadt**, Elektro Granowski, Emil-Hartmann-Str. 2, Tel: 03672-32123 / **07545 Gera**, ESS GmbH, Amthorstr. 12, Tel: 0365-6112316, Fax: -6112244 / **07607 Hainitz**, Herrmann & Söhne, Böllschützstr. 1, Tel: 036691-53490, Fax: -53493 / **07973 Greiz**, Elektro Riederer, Reichenbacher Str. 44d, Tel: 03661-3148, Fax: -2488 / **08280 Aue**, Weichhold GmbH, Juri-Gagarin-Ring 12a, Tel: 03771-552222, Fax: -552255 / **08523 Plauen**, Elektrotechnik Plauen, Tel: 03741-26645, Fax: -26868 / **09126 Chemnitz**, Tele-Service GmbH, Bernsdorfer Str. 213, Tel: 0371-586960, Fax: 0371-55938 / **09221 Neukirchen**, Elektro Walther, Hauptstr. 74, Tel: 0371-37061 / **09246 Pleiße**, ETS Electrotechnische Großh., Zeppelinstr. 8, Tel: 03722-6040, Fax: 03722-604200 / **09328 Lützenau**, Peter Welsch GmbH, Schulstr. 6, Tel: 037383-6434, Fax: -6600 / **09376 Oelsnitz**, Oelsnitz Elektrotechnik GmbH, Bahnhofstr. 43, Tel: 037298-360, Fax: -36102 / **10178 Berlin**, hatec Handels-Service GmbH, Dirksenstr. 113-117, Tel: 030-2426915, Fax: -2423924 / **10553 Berlin**, Deubel & Höfermann GmbH Wiebestraße 41 Tel: 030-3455055 Fax: 3455056 / **12157 Berlin**, Michael Kittler, Cranachstr. 2, Tel: 030-8554835, Fax: 030-8554835 / **12681 Berlin**, Gehado Service GmbH Wolfenerstraße 36 Tel: 030-936934/0 Fax: 93693444 / **12683 Berlin**, Deubel & Höfermann, Rapsweg 53, Tel: 030-5619112, Fax: -5619112 / **16866 Kyritz**, hatec Handels-Service GmbH, Hamburger Str. 31, Tel: 033971-4137, Fax: -4137 / **17033 Neubrandenburg**, ATV Service GmbH, Woldegker Str. 12, Tel: 0395-587504, Fax: -587518 / **18055 Rostock**, Hetec, Mühlendamm 5, Tel: 0381-36231, Fax: 0381 - 36231 / **18435 Stralsund**, RDS Haushaltsg. Service, Kedingshäuser Str. 78, Tel: 03831-391426, Fax: -390121 / **20357 Hamburg**, Dieter Möller, Schulterblatt 132, Tel: 040-435332, Fax: -4302120 / **20537 Hamburg**, Deubel & Höfermann, Eifffstr. 398, Tel: 040-257227, Fax: -2500192 / **23562 Lübeck**, Lutz H. Boenisch, Helmholzstr. 12, Tel: 0451-51929 / **24116 Kiel**, Jürgen Skop GmbH, Eckernförder Str. 93, Tel: 0431-13038, Fax: -13811 / **24357 Fleckeby**, Kaack Haushaltsg. Service, Südring 14, Tel: 04354-700, Fax: -1311 / **24975 Husby**, Günter Josten, Flensburger Str. 41, Tel: 04634-422, Fax: 723 / **25770 Hemmingstedt**, Dirk Stübner, Koesliner Str. 18, Tel: 0481-64943, Fax: -64764 / **26655 Westerstede**, Gerhard Ahrenholz, Südring 37, Tel: 04488-84770, Fax: -847711 / **26802 Moormerland**, Weert Nordbrock, Königsstr. 187, Tel: 04954-6654, Fax: -6516 / **27404 Heeslingen**, Helmut Willenbrock, Kirchstr. 9-11, Tel: 04281-1031, Fax: -6467 / **27478 Cuxhaven**, Oskar Wieandt & Sohn, Am Kanal 5, Tel: 04724-81300, Fax: -813050 / **28207 Bremen**, Hansa Haushaltsg. Service, Neidenburger Str. 20, Tel: 0421-492526, Fax: -440932 / **29439 Lüchow**, Elektro-Kittler, Guldenboden 25, Tel: 05841-3322, Zentrale: 030-8551335 / **30165 Hannover**, Strickling Werkkundendienste, Meelbaumstr. 8, Tel: 0511-3524686, Fax: -3505800 / **33607 Bielefeld**, Voss GmbH, Kuckucksweg 47, Tel: 0521-285058, Fax: -285059 / **34123 Kassel**, von Rappard GmbH, Heinrich-Hertz-Str. 9, Tel: 0561-580950, Fax: -5809570 / **34128 Kassel**, Elektro Mohrenne, Ahnatalstr. 84, Tel: 0561-61727, Fax: 0561-65470 / **35037 Marburg**, Hans-Georg Fuchs, Wilhelmstr. 16, Tel: 06421-22424, Fax: -27549 / **35415 Pohlheim**, Jung Kundenzentrum, Ludwigstr. 13, Tel: 06403-61131 / **36088 Hünfeld**, Elektro Vogt GmbH, Hauptstr. 22, Tel: 06652-2215, Fax: -5782 / **37671 Hötter**, Elektro-Kühlanlagen Nonn, Krämerstr. 8, Tel: 05271-7959, Fax: -35053 / **38440 Wolfsburg**, G. Gärtner, Grauhorstr. 16, Tel: 05361-31063, Fax: -31272 / **39106 Magdeburg**, Industrie-Elektronik, Kaiser-Otto-Ring 24, Tel: 0391-551402, Fax: -553520 / **40210 Düsseldorf**, Herbert Dahm KG, Bendemannstr. 9, Tel: 0211-35550, Fax: -3555120 / **40476 Düsseldorf**, Horst Leven, Rathstr. 21, Tel: 0211-486025, Fax: -443399 / **41065 Mönchengladbach**, Herbert Hommers, Gutenbergstr. 28, Tel: 02161-603256, Fax: -651951 / **42781 Haan**, Host Kerkühn, Talstr. 8b, Tel: 02129-4466, Fax: -4037 / **44357 Dortmund**, Gehado Service, Freigrafenstr. 23-29, Tel: 0231-937000/0, Fax: 93700044 / **44869 Bochum**, ML Werks-Service GmbH, Ruhrstr. 181, Tel: 02327-77899, Fax: -74692 / **45219 Essen**, R. Drengenburg, Corneliusstr. 39, Tel: 02054-84114 / **46045 Oberhausen**, Elektro Kroppen, Feldmannstr. 76, Tel: 0208-871711, Fax: -876652 / **48165 Münster**, Günter Pfeifer, Rohrkampstr. 23, Tel: 02501-3033 / **49324 Melle**, Borgards GmbH, Plettenberger Str. 50, Tel: 05422-949740, Fax: -949792 / **49492 Westerkappeln**, Elektro Iborg, Goedekingstr. 8, Tel/Fax: 05404-1616 / **50827 Köln**, Hermann F. Esser, Wilhelm-Mauser-Str. 47, Tel: 0221-583006, Fax: -585555 / **51598 Friesenhagen**, Hans Krempel Haustechnik, Mühlenhof 6, Tel: 02734-7377, Fax: -40618 / **52146 Würselen**, Hubert Hamacher, De Gasperistr. 6+10, Tel: 02405-9600, Fax: -2704 / **53375 Sankt Augustin**, HDL Elektro-Kundendienst, Kölnstr. 4, Tel: 02241-334408, Fax: -920334 / **54309 Newel**, Hans Krempel Haustechnik, Römerstr. 22, Tel: 06505-8899 / **55130 Mainz**, Norbert Schwamb, nur telefonische Annahmestelle, Tel: 06131 - 881070 / **55543 Bad Kreuznach**, Hans Krempel Haustechnik, Industriest. , Tel: 0671-7940, Fax: -79446 / **55569 Monzingen**, Hans Krempel GmbH Jahnstraße 16 Tel: 06751-2841 Fax: 2841 / **56070 Koblenz**, Hans Krempel Haustechnik, August-Horch-Str. 14, Tel: 0261-890938, Fax: -83074 / **57080 Siegen**, Hans Krempel Haustechnik, Gosenbacher Hütte 44, Tel: 0271-354114, Fax: -351408 / **57234 Wilnsdorf**, Elektro Mutschler, Hauptstr. 18, Tel: 02739-3069, Fax: -4699 / **58239 Schwerte**, HHKT Electronica J. Schlütz, Holzener Weg 79, Tel: 02304-82025, Fax: -86360 / **59457 Werl**, Mayer Elektro, Westdahlweg 2, Tel: 02922-3541, Fax: -85382 / **61381 Friedrichsdorf**, Großkücheneinr. Hollmann, Bahnstr. 17a, Tel: 06172-5276, Fax: 75883 / **63150 Heusenstamm**, Heberer Electronic, Goethestr. 10, Tel: 06104-923704, Fax: 923705 / **63739 Aschaffenburg**, Reis Radio Fernsehen, Maximilianstr. 8, Tel: 06021-15177, Fax: -15199 / **65239 Hochheim**, Norbert Schwamb GmbH, Elvillerstr. 14, Tel: 06146-4085, Fax: -4088 / **65627 Elbtal**, Rudi Wagner, Am Ohlenrod 10, Tel/Fax: 06436-3444 / **65931 Frankfurt**, Norbert Schwamb, nur telefonische Annahme: 069-371525 / **66117 Saarbrücken**, Hans Krempel Haustechnik, Zinzinger Str. 13, Tel: 0681-500850, Fax: 5008524 / **66280 Sulzbach-Neuweiler**, R. + F. Service Industriestraße Tel: 06897-2370 Fax: 2314 / **67434 Neustadt**, Hans Krempel GmbH Saarlandstraße 55 Tel: 06321-83077 Fax: 83077 / **67549 Worms**, Hans Krempel Haustechnik, Müllerstr. 24,



• SERVICE NIEDERLASSUNGEN • ADDRESSES D'ENTRETIEN • ONDERHOUDSADRESSEN • DIRECCIONES DE SERVICIO • INDIRIZZI DI SERVIZIO •

Tel: 06241-54224, Fax: - 54225 / **67663 Kaiserslautern**, Hans Kreml Haustechnik, Merkurstr. 6a, Tel: 0631-52078, Fax: - 52079 / **68309 Mannheim**, Hans Kreml Haustechnik, Heppenheimer Str.23, Tel: 0621-737978, Fax: 722404 / **68309 Mannheim**, Electronic SVC Schaaf, Reichenbachstr. 21-23, Tel: 0621-727877, Fax: 7278750 / **68526 Ladenburg**, Salinger Elektro Service, Brauergasse 2, Tel: 06203-3341, Fax: - 16919 / **70329 Stuttgart**, Elektro Herterich, Fruchstr. 11, Tel: 0711-4201780, Fax: - 426153 / **74564 Crailsheim**, Elektro Reu, Lange Str. 20-22, Tel: 07951-6019, Fax: - 6018 / **75236 Kämpfelbach**, Horst Frei, Goethestr. 19, Tel: 07232-1518, Fax: - 5238 / **76185 Karlsruhe**, Electronic Service Franke, Lotzbeckstr. 9, Tel: 0721-570070, Fax: - 5700736 / **76872 Winden**, Hans Kreml Haustechnik, Hauptstr. 103, Tel: 06349-8571, Fax: - 3390 / **78462 Konstanz**, Elektro Herterich, nur telefonische Annahmestelle: Tel: 07531-27923 / **78737 Fluorn-Winzeln**, Edmund Schneider, Schaffbaumstr. 9, Tel: 07402-482, Fax: - 8014 / **79115 Freiburg**, Electronic Service Franke, Wiesentalstr. 13, Tel: 0761-42671-72, Fax: - 42675 / **79650 Schopfheim**, R. Grossmann, Feldbergstr. 21, Tel: 07622-7673, Fax: - 61900 / **80339 München**, Kesel & Schnitt, Schwanthaler Str. 110, Tel: 089-505802, Fax: - 5021596 / **82166 Gräfelfing**, Jung TV Service, Lohenstr. 14, Tel: 089-8545081, Fax: - 852413 / **85095 Denkendorf**, Reinhold Pfeiffer, Michlstr. 3, Tel/Fax: 08466-1319 / **85413 Hergertshausen**, Elektro Radlmaier, Schloßstr. 7, Tel: 08764-458, Fax: - 1228 / **85609 Aschheim**, Dieter Beise, Waldweg 9a, Tel: 089-9034005, Fax: - 9044859 / **86157 Augsburg**, Johann Haslinger, Stadtberger Str. 67, Tel: 0821-523125, Fax: - 526664 / **87439 Kempten**, Radio Hartmann, Heiligkreuzer Str. 17, Tel: 0831-93231, Fax: 91319 / **89231 Neu-Ulm**, Markus Schneider, Gartenstr. 4, Tel: 0731-85897, Fax: - 74681 / **89564 Nattheim**, Elektro Oechsle GmbH, Fleinheimerstr. 49, Tel: 07321-71442, Fax: - 72341 / **90431 Nürnberg**, Gehado SVC, Dattenheimer Str. 4, Tel: 0911-939740, Fax: 0911-3263378 / **91126 Schwabach**, Elektro & Elektronik KD, Limbacherstr. 81, Tel: 09122-84135, Fax: - 61677 / **91522 Ansbach**, Elektro Merk GmbH, Am Ring 17, Tel: 0981-89574, Fax: - 86715 / **93102 Pfaffers**, Franz Bernhard, Regensburger Str. 60, Tel: 09481-1505, Fax: - 8124 / **94130 Obernzell**, Elektro Service Schurig, Hameterstr. 31, Tel: 08591-2400, Fax: - 1285 / **96052 Bamberg**, Bernhard Jackl, Aronstr. 2a, Tel: 0951-39332, Fax: - 37423 / **97070 Würzburg**, Wels GmbH, Untere Johannitergasse 16, Tel: 0931-355710, Fax: - 3557121 / **97318 Kitzingen**, K & M Hoffritz GmbH, Herrnstr. 4-6, Tel: 09321-4221, Fax: - 32185 / **98724 Neuhaus**, DLC Haustechnik GmbH, Eisdorfer Str. 32, Tel: 03679-4651, Fax: - 2169 / **99096 Erfurt**, Ernst Grüsser, Goethestr. 14, Tel: 0361-5626519, Fax: - 5626519 / **99734 Nordhausen**, Südharzer Dienstl. GmbH, Grimmelallee 40, Tel: 03631-2040, Fax: 3654 / **99817 Eisenach**, Blitz Electronic GmbH, Bahnhofstr. 17, Tel: 03691-77291, Fax: 72105

## FRANCE

**En cas de réclamation pour les fours micro-ondes SHARP, nous vous prions de vous adresser à votre spécialiste ou à l'une des stations techniques agréées SHARP suivantes :**

**A.A.V.I.** : 1, Rue du Mont de Terre, 59818 Lesquin Cédex. Tél : 03 20 62 18 98 - Fax : 03 20 86 20 60. Départements desservis : 02, 08, 59, 62, 80 / **ASYSTEC** : P.A. Charles de Gaulle, 4 rue des Artisans, 95190 Goussainville. Tél : 01 39 88 80 00 - Fax : 01 34 38 91 20. Départements desservis : 60, 77, 93, 95 / **ATELIER ROUSSEL** : 12, Bld Flandre Dunkerque, 56100 Lorient. Tél : 02 97 83 07 41 - Fax: 02 97 87 02 36. Départements desservis : 22, 29, 35, 44, 56 / **C.E.A.T.** : 9, Rue de Venise, 21000 Dijon. Tél : 03 80 66 15 57 - Fax: 03 80 67 12 36. Départements desservis : 10, 21, 25, 39, 52, 58, 71, 89 / **C.M.T.S.** : 38, Rue des Ormeaux, 75020 Paris. Tél : 01 43 70 20 00 - Fax: 01 43 70 36 46. Départements desservis : 75, 77, 78, 91, 92, 93, 94, 95 / **C.T.E.** : Zone Tilly - 116 rte de Thionville, 57140 Woippy. Tél : 03 87 30 14 14 - Fax: 03 87 30 85 07. Départements desservis : 51, 54, 55, 57, 88 / **ELECMA** : 6 Bld Gueidon, 13013 Marseille. Tél : 04 91 06 22 56 - Fax : 04 91 06 22 90. Départements desservis : 13, 26, 30, 34, 43, 48, 83, 84 / **ELECTRO SERVICE** : 21 rue de Mulhouse, BP 122, 68313 ILLZACH. Tél : 03 89 62 50 00 - Fax : 03 89 50 80 14. Départements desservis : 67, 68, 70, 90 / **M.E.C.** : 118 Bld Tonnellé, 37020 Tours. Tél : 02 47 77 90 90 - Fax : 02 47 77 90 91. Départements desservis : 18, 36, 37, 41, 45, 44, 49, 79, 85, 86 / **M.R.T.** : 74, Rue Albert Einstein, 72021 Le Mans Cedex. Tél : 02 43 28 52 20 - Fax: 02 43 24 93 81. Départements desservis : 28, 53, 61, 72 / **ROSSIGNOL** : ZL du Brezet Est, 6 rue P. Boulanger, 63100 Clermont Ferrand. Tél : 73 91 93 09, Fax: 73 92 28 79. Départements desservis : 3, 15, 19, 23, 43, 63 / **SETELEC** : 23, Rue du Chatelet, 76420 Bihorel les Rouen. Tél : 35 60 64 39 - Fax: 35 59 93. 48. Départements desservis : 14, 27, 50, 76 / **S.T.E.** : 3, Chemin de l'Industrie, 06110 Le Cannet Rocheville. Tél : 93 46 05 00 - Fax: 93 46 51 18. Départements desservis : 04, 06 / **S.T.V.S.** : 18, Rue Benoit Malon, 42000 Saint Etienne. Tél : 77 32 74 57, Fax: 77 37 45 29. Départements desservis : 03, 07, 42, 43, 63 / **S.T.V.S.** : 10, Chemin Saint-Gobain, 69190 Saint Fons. Tél : 78 70 03 32 - Fax: 78 70 86 61. Départements desservis : 01, 38, 69, 71, 73, 74 / **TECH SERVICE** : Batiment G-Imposse Boudeville, 31100 Toulouse. Tél : 61 44 98 45 - Fax: 62 14 16 13. Départements desservis : 09, 11, 31, 32, 33, 40, 47, 64, 65, 66, 81, 82 / **TIMO VIDEO** : 29 rue Elisabeth, 91330 Yerres. Tél : 69 48 04 80 - Fax: 69 83 36 10. Départements desservis : 28, 45, 77, 89, 912, 94 / **U.N.I.D.** : 1, Rue des Lourdes, 76000 Rouen. Tél : 35 72 28 04 - Fax: 35 73 18 32. Départements desservis : 14, 27, 50, 76

## ITALIA

**NEL CASO SI VERIFICASSERO PROBLEMI ALLA VOSTRA APPARECCHIATURA POTRETE RIVOLGERVI PRESSO UN NOSTRO CENTRO DI ASSISTENZA AUTORIZZATO SHARP**

**Microcentro**, Via Falloppio 11, 20100 Milano, Phone: 02-26827306 / **Rota G.**, Via Martinella 65, 24020 Torre Boldone (BG), Phone: 035-344492 / **ServiceTVA**, Via Vergnano 59, 25127 Brescia, Phone: 011-2296000, Fax: 011253921 / **Tre Esse**, Via M. Coppino 96/e, 10147 Torino, Phone: 011-2296000, Fax: 011-253921 / **Video Service s.n.c.**, Via Giordano 52/54, 16100 Genova, Phone: 010-6043580 / **Tecnoservice s.n.c.**, Via San Vigilio 64/b-c-d, 39100 Bolzano, Phone: 0471-289062 / **Campi**, Via Noalese 87, 31100 Treviso, Phone: 0422-436245, Fax: 0422-435996 / **Video Service**, Via Vitruvio 11, 37100 Verona, Phone: 045-566299, Fax: 045-573865 / **Video Hi-fi**, Via Longhi 16 a/b, 40128 Bologna, Phone: 051-360986, Fax: 051-366863 / **Aerre Digit**, Via Marbellini 10/12, 50127 Firenze, Phone: 055-410874, Fax: 055-411490 / **Saec di Coppa**, Via Rinchiostra Nord 34, 54100 Massa, Phone: 0585-251724, Fax: 0585-791177 / **Tecniconsult**, Via Mad. Alta 185, 06100 Perugia, Phone: 075-5003089 / **Digitecnica s.n.c.**, Via Zuccarini 1-Zona Baraccola, 60131 Candia (AN) Phone : 071-2866067 / **S.A.R.E. s.r.l.**, Via Barbana 35/37, 00142 Roma, Phone 06-5406796 / **Tecno Labs**, Via Naz. Delle Puglie 294, 80026 Casoria (NA), Phone: 081-5845923 / **Marcantonio**, Via G.M.Giovene 45, 70124 Bari, Phone: 080-5618029 / **Audio Video**, Via A. de Gasperi 44, 88018 Vibo Valentia, Phone: 0963-45571/2 / **A.V.S.**, Via Sossari2/c, 95100 Catania, Phone: 095-446696, Fax: 095-434337 / **AS. TEC.**, Via R. Villasanta 227, 09100 Cagliari, Phone: 070-524153, Fax: 070-504109

## ESPAÑA

**En caso de una reclamación con vuestra SHARP Microwave, preguntan por favor la casa dónde han comprado su máquina o infórmanse en una de las SHARP Service casas siguientes.**

**MERINO NICOLAS JOSE A.**, - 945/ 25.18.92 - AV JUDIZMENDI 24, 01003 VITORIA-GASTEIZ, ALAVA / **TELE-COLOR** - 96/585.24.60, CL DEL VENT 9, 03500 BENIDORM, ALICANTE / **TELECOM ELECTRONICA** - 96/539.50.21, CL HERNAN CORTES 8, 03600 ELDA, ALICANTE / **EUROSAT, S.L.** - 96/525.80.40, CL MONTERO RIOS 3303013 ALICANTE, ALICANTE / **ELECTRONICA GOMEZ** - 96/ 546.75.81, CL BAITASAR TRISTANY 100, 03201 ELICHE, ALICANTE / **ANGEL AVELLAN PUIG** - 965/ 21.32.55, CL POETA QUINTANA 13, 03004 ALICANTE, ALICANTE / **ELECTRONICA ELER** - 965/ 25.63.32, CL PINOSO 8, 03012 ALICANTE, ALICANTE / **INSAT, CB** - 971/ 36.53.18, CL PINTOR CALBO 30, 07703 MAHON, BALEARES (MENORCA) / **REPARACIONES ORTEGA** - 971/ 39.01.55, CL VIA PUNICA 33, 07800 IBIZA, BALEARES (IBIZA). / **AUDIO IMAGEN** - 971/ 31.46.59, CL JOSE RIQUER LOBET 8, 07800 IBIZA, BALEARES (IBIZA) / **IRTESA ELECTRONICA** - 971/ 20.47.02, CL JAUME FERRAN 72 BJOS, 07004 PALMA DE MALLORCA, BALEARES (MALLORCA) / **INSTALACIONES MAES, S.L.** - 971/ 27.49.47, CL SON NADAL 63, 07008 PALMA DE MALLORCA, BALEARES (MALLORCA) / **ELECTRON. PONS GOMILA SA** - 971/ 37.22.76, CR NUEVA 162, 07730 ALAYOR, BALEARES (MENORCA) / **JOSE MARQUES ANGLADA, S.L.** - 971/ 38.54.54, CL LEFANTO 19, 07760 CIUDADELA, BALEARES (MENORCA) / **ANOIA ELECTROVISION** - 93/ 805.11.90, AV BALMES 12, 08700 IGUALADA, BARCELONA / **AUDIO VISION** - 385.78.08, CL MARE DEU MONTERRAT 22, 08922 STA.COLOMA, BARCELONA / **SAC-2, S.C.P.** - 331.77.54, CL RIERA BLANCA 113, 08028 BARCELONA, BARCELONA / **FERMO** - 465.22.00, AV MORERA 5, 08915 BADALONA, BARCELONA / **ELEC.SAFONT** - 821.30.03, CL GRAL. MANSO SOLA 31, 08600 BERGA, BARCELONA / **SERVINTERS, S.C.C.L.** - 389.44.60 - PZ CASAGEMES 20, 08911 BADALONA, BARCELONA / **TECNIK'S, S.C.P.** - 630.11.20, CL JOAN BARDINA 32, 08830 SANT BOI DE LL, BARCELONA / **CE. VA. SAT, S.C.** - 785.51.11, CR MATADEPERA 87, 08225 TERRASSA, BARCELONA / **LAUREA S.A.T.** -



• SERVICE NIEDERLASSUNGEN • ADDRESSES D'ENTRETIEN • ONDERHOUDSADRESSEN • DIRECCIONES DE SERVICIO • INDIRIZZI DI SERVIZIO •

Tel: 06241-54224, Fax: - 54225 / **67663 Kaiserslautern**, Hans Krempel Haustechnik, Merkurstr. 6a, Tel: 0631-52078, Fax: - 52079 / **68309 Mannheim**, Hans Krempel Haustechnik, Heppenheimer Str. 23, Tel: 0621-737978, Fax: - 722404 / **68309 Mannheim**, Electronic SVC Schaaf, Reichenbachstr. 21-23, Tel: 0621-727877, Fax: - 7278750 / **68526 Ladenburg**, Salinger Elektro Service, Brauergasse 2, Tel: 06203-3341, Fax: - 16919 / **70329 Stuttgart**, Elektro Herterich, Fruchstr. 11, Tel: 0711-4201780, Fax: - 426153 / **74564 Crailsheim**, Elektro Reu, Lange Str. 20-22, Tel: 07951-6019, Fax: - 6018 / **75236 Kämpfelbach**, Horst Frei, Goethestr. 19, Tel: 07232-1518, Fax: - 5238 / **76185 Karlsruhe**, Electronic Service Franke, Lotzbeckstr. 9, Tel: 0721-570070, Fax: - 5700736 / **76872 Winden**, Hans Krempel Haustechnik, Hauptstr. 103, Tel: 06349-8571, Fax: - 3390 / **78462 Konstanz**, Elektro Herterich, nur telefonische Annahmestelle: Tel: 07531-27923 / **78737 Fluorn-Winzeln**, Edmund Schneider, Schaffbaumstr. 9, Tel: 07402-482, Fax: - 8014 / **79115 Freiburg**, Electronic Service Franke, Wiesentalstr. 13, Tel: 0761-42671-72, Fax: - 42675 / **79650 Schopfheim**, R. Grossmann, Feldbergstr. 21, Tel: 07622-7673, Fax: - 61900 / **80339 München**, Kessel & Schnitt, Schwanthaler Str. 110, Tel: 089-505802, Fax: - 5021596 / **82166 Gräfelfing**, Jung TV Service, Lohenstr. 14, Tel: 089-8545081, Fax: - 852413 / **85095 Denkendorf**, Reinhold Pfeiffer, Michlstr. 3, Tel/Fax: 08466-1319 / **85413 Hörgerthausen**, Elektro Radlmaier, Schloßstr. 7, Tel: 08764-458, Fax: - 1228 / **85609 Aschheim**, Dieter Beise, Waldweg 9a, Tel: 089-9034005, Fax: - 9044859 / **86157 Augsburg**, Johann Haslinger, Stadtberger Str. 67, Tel: 0821-523125, Fax: - 526664 / **87439 Kempten**, Radio Hartmann, Heiligkreuzer Str. 17, Tel: 0831-93231, Fax: 91319 / **89231 Neu-Ulm**, Markus Schneider, Gartenstr. 4, Tel: 0731-85897, Fax: - 74681 / **89564 Nattheim**, Elektro Oechsle GmbH, Fleinheimerstr. 49, Tel: 07321-71442, Fax: - 72341 / **90431 Nürnberg**, Gehado SVC, Dottenheimer Str. 4, Tel: 0911-939740, Fax: 0911-3263378 / **91126 Schwabach**, Elektro & Elektronik KD, Limbacherstr. 81, Tel: 09122-84135, Fax: - 61677 / **91522 Ansbach**, Elektro Merk GmbH, Am Ring 17, Tel: 0981-89574, Fax: - 86715 / **93102 Pfaffers**, Franz Bernhard, Regensburger Str. 60, Tel: 09481-1505, Fax: - 8124 / **94130 Obernzell**, Elektro Service Schurig, Hameterstr. 31, Tel: 08591-2400, Fax: - 1285 / **96052 Bamberg**, Bernhard Jackl, Aronstr. 2a, Tel: 0951-39332, Fax: - 37423 / **97070 Würzburg**, Wels GmbH, Untere Johannergergasse 16, Tel: 0931-355710, Fax: - 3557121 / **97318 Kitzingen**, K & M Hoffritz GmbH, Herrnstr. 4-6, Tel: 09321-4221, Fax: - 32185 / **98724 Neuhaus**, DLC Haustechnik GmbH, Eisdorfer Str. 32, Tel: 03679-4651, Fax: - 2169 / **99096 Erfurt**, Ernst Grüsser, Goethestr. 14, Tel: 0361-5626519, Fax: - 5626519 / **99734 Nordhausen**, Südharzer Dienstl. GmbH, Grimmellallee 40, Tel: 03631-2040, Fax: 3654 / **99817 Eisenach**, Blitz Electronic GmbH, Bahnhofstr. 17, Tel: 03691-77291, Fax: 72105

## FRANCE

En cas de réclamation pour les fours micro-ondes SHARP, nous vous prions de vous adresser à votre spécialiste ou à l'une des stations techniques agréées SHARP suivantes :

**A.A.V.I.** : 1, Rue du Mont de Terre, 59818 Lesquin Cédex. Tél : 03 20 62 18 98 - Fax : 03 20 86 20 60. Départements desservis : 02, 08, 59, 62, 80 / **ASYSTEC** : P.A. Charles de Gaulle, 4 rue des Artisans, 95190 Goussainville. Tél : 01 39 88 80 00 - Fax : 01 34 38 91 20. Départements desservis : 60, 77, 93, 95 / **ATELIER ROUSSEL** : 12, Bld Flandre Dunkerque, 56100 Lorient. Tél : 02 97 83 07 41 - Fax: 02 97 87 02 36. Départements desservis : 22, 29, 35, 44, 56 / **C.E.A.T.** : 9, Rue de Venise, 21000 Dijon. Tél : 03 80 66 15 57 - Fax: 03 80 67 12 36. Départements desservis : 10, 21, 25, 39, 52, 58, 71, 89 / **C.M.T.S.** : 38, Rue des Ormeaux, 75020 Paris. Tél : 01 43 70 20 00 - Fax: 01 43 70 36 46. Départements desservis : 75, 77, 78, 91, 92, 93, 94, 95 / **C.T.E.** : Zone Tilly - 116 rte de Thionville, 57140 Woippy. Tél : 03 87 30 14 14 - Fax: 03 87 30 85 07. Départements desservis : 51, 54, 55, 57, 88 / **ELECMA** : 6 Bld Gueidon, 13013 Marseille. Tél : 04 91 06 22 56 - Fax: 04 91 06 22 90. Départements desservis : 13, 26, 30, 34, 43, 48, 83, 84 / **ELECTRO SERVICE** : 21 rue de Mulhouse, BP 122, 68313 ILLZACH. Tél : 03 89 62 50 00 - Fax : 03 89 50 80 14. Départements desservis : 67, 68, 70, 90 / **M.E.C.** : 118 Bld Tonnelle, 37020 Tours. Tél : 02 47 77 90 90 - Fax : 02 47 77 90 91. Départements desservis : 18, 36, 37, 41, 45, 44, 49, 79, 85, 86 / **M.R.T.** : 74, Rue Albert Einstein, 72021 Le Mans Cedex. Tél : 02 43 28 52 20 - Fax: 02 43 24 93 81. Départements desservis : 28, 53, 61, 72 / **ROSSIGNOL** : ZL du Brezet Est, 6 rue P. Boulanger, 63100 Clermont Ferrand. Tél : 73 91 93 09, Fax: 73 92 28 79. Départements desservis : 3, 15, 19, 23, 43, 63 / **SETELEC** : 23, Rue du Chatelet, 76420 Bihorel les Rouen. Tél : 35 60 64 39 - Fax: 35 59 93. 48. Départements desservis : 14, 27, 50, 76 / **S.T.E.** : 3, Chemin de l'Industrie, 06110 Le Cannet Rocheville. Tél : 93 46 05 00 - Fax: 93 46 51 18. Départements desservis : 04, 06 / **S.T.V.S.** : 18, Rue Benoit Malon, 42000 Saint Etienne. Tél : 77 32 74 57, Fax: 77 37 45 29. Départements desservis : 03, 07, 42, 43, 63 / **S.T.V.S.** : 10, Chemin Saint-Gobain, 69190 Saint Fons. Tél : 78 70 03 32 - Fax: 78 70 86 61. Départements desservis : 01, 38, 69, 71, 73, 74 / **TECH SERVICE** : Batiment G-Impasse Boudeville, 31100 Toulouse. Tél : 61 44 98 45 - Fax: 62 14 16 13. Départements desservis : 09, 11, 31, 32, 33, 40, 47, 64, 65, 66, 81, 82 / **TIMO VIDEO** : 29 rue Elisabeth, 91330 Yerres. Tél : 69 48 04 80 - Fax: 69 83 36 10. Départements desservis : 28, 45, 77, 89, 912, 94 / **U.N.I.D.** : 1, Rue des Lourdes, 76000 Rouen. Tél : 35 72 28 04 - Fax: 35 73 18 32. Départements desservis : 14, 27, 50, 76

## ITALIA

NEL CASO SI VERIFICASSERO PROBLEMI ALLA VOSTRA APPARECCHIATURA POTRETE RIVOLGERVI PRESSO UN NOSTRO CENTRO DI ASSISTENZA AUTORIZZATO SHARP

**Microcentro**, Via Falloppio 11, 20100 Milano, Phone: 02-26827306 / **Rota G.**, Via Martinella 65, 24020 Torre Boldone (BG), Phone: 035-344492 / **ServiceIVA**, Via Vergnano 59, 25127 Brescia, Phone: 011-2296000, Fax: 011253921 / **Tre Esse**, Via M. Coppino 96/e, 10147 Torino, Phone: 011-2296000, Fax: 011-253921 / **Video Service s.n.c.**, Via Giordano 52/54, 16100 Genova, Phone: 010-6043580 / **Tecnoservice s.n.c.**, Via San Vigilio 64/b-c-d, 39100 Bolzano, Phone: 0471-289062 / **Campi**, Via Noalese 87, 31100 Treviso, Phone: 0422-436245, Fax: 0422-435996 / **Video Service**, Via Vitruvio 11, 37100 Verona, Phone: 045-566299, Fax: 045-573865 / **Video Hi-fi**, Via Longhi 16 a/b, 40128 Bologna, Phone: 051-360986, Fax: 051-366863 / **Aerre Digit**, Via Marbellini 10/12, 50127 Firenze, Phone: 055-410874, Fax: 055-411490 / **Saer di Coppa**, Via Rinchiostra Nord 34, 54100 Massa, Phone: 0585-251724, Fax: 0585-791177 / **Tecnosconsult**, Via Mad. Alta 185, 06100 Perugia, Phone: 075-5003089 / **Digitecnica s.n.c.**, Via Zuccarini 1 - Zona Baraccola, 60131 Candia (AN) Phone: 071-2866067 / **S.A.R.E. s.r.l.**, Via Barabana 35/37, 00142 Roma, Phone 06-5406796 / **Tecno Labs**, Via Naz. Delle Puglie 294, 80026 Casoria (NA), Phone: 081-5845923 / **Marcantonio**, Via G.M. Giovenale 45, 70124 Bari, Phone: 080-5618029 / **Audio Video**, Via A. de Gasperi 44, 88018 Vibo Valentia, Phone: 0963-45571/2 / **A.V.S.**, Via Sassari 2/c, 95100 Catania, Phone: 095-446696, Fax: 095-434337 / **AS. TEC.**, Via R. Villasantia 227, 09100 Cagliari, Phone: 070-524153, Fax: 070-504109

## ESPAÑA

En caso de una reclamación con vuestra SHARP Microwave, preguntan por favor la casa dónde han comprado su máquina o informarse en una de las SHARP Service casas siguientes.

**MERINO NICOLAS JOSE A.** - 945/ 25.18.92 - AV JUDIZMENDI 24, 01003 VITORIA-GASTEIZ, ALAVA / **TELE-COLOR** - 96/585.24.60, CL DEL VENT 9, 03500 BENIDORM, ALICANTE / **TELECOM ELECTRONICA** - 96/539.50.21, CL HERNAN CORTES 8, 03600 ELDA, ALICANTE / **EUROSAT, S.L.** - 96/525.80.40, CL MONTERO RIOS 3303013 ALICANTE, ALICANTE / **ELECTRONICA GOMEZ** - 96/ 546.75.81, CL BALTASAR TRISTANY 100, 03201 ELICHE, ALICANTE / **ANGEL AVELLAN PUIG** - 965/ 21.32.55, CL POETA QUINTANA 13, 03004 ALICANTE, ALICANTE / **ELECTRONICA ELER** - 965/ 25.63.32, CL PINOSO 8, 03012 ALICANTE, ALICANTE / **INSAT, CB** - 971/ 36.53.18, CL PINTOR CALBO 30, 07703 MAHON, BALEARES (MENORCA) / **REPARACIONES ORTEGA** - 971/ 39.01.55, CL VIA PUNICA 33, 07800 IBIZA, BALEARES (IBIZA). / **AUDIO IMAGEN** - 971/ 31.46.59, CL JOSE RIQUELME LOBET 8, 07800 IBIZA, BALEARES (IBIZA) / **IRTESA ELECTRONICA** - 971/ 20.47.02, CL JAUME FERRAN 72 BJOS, 07004 PALMA DE MALLORCA, BALEARES (MALLORCA) / **INSTALACIONES MAES, S.L.** - 971/ 27.49.47, CL SON NADAL 63, 07008 PALMA DE MALLORCA, BALEARES (MALLORCA) / **ELECTRON. PONS GOMILA SA** - 971/ 37.22.76, CR NUEVA 162, 07730 ALAYOR, BALEARES (MENORCA) / **JOSE MARQUES ANGLADA, S.L.** - 971/ 38.54.54, CL LEFANTO 19, 07760 CIUADADELA, BALEARES (MENORCA) / **ANOIA ELECTROVISIO** - 93/ 805.11.90, AV BALMES 12, 08700 IGUALADA, BARCELONA / **AUDIO VISION** - 385.78.08, CL MARE DEU MONTSERRAT 22, 08922 STA.COLOMA, BARCELONA / **SAC-2, S.C.P.** - 331.77.54, CL RIERA BLANCA 113, 08028 BARCELONA, BARCELONA / **FERMO** - 465.22.00, AV MORERA 5, 08915 BADALONA, BARCELONA / **ELEC.SAFONT** - 821.30.03, CL GRAL. MANSO SOLA 31, 08600 BERGA, BARCELONA / **SERVINTERS, S.C.C.L.** - 389.44.60 - PZ CASAGEMES 20, 08911 BADALONA, BARCELONA / **TECNIK'S, S.C.P.** - 630.11.20, CL JOAN BARDINA 32, 08830 SANT BOI DE LL, BARCELONA / **CE. VA. SAT, S.C.** - 785.51.11, CR MATADEPERA 87, 08225 TERRASSA, BARCELONA / **LAUREA S.A.T.** -

• SERVICE NIEDERLASSUNGEN • ADDRESSES D'ENTRETIEN • ONDERHOUDSADRESSEN • DIRECCIONES DE SERVICIO • INDIRIZZI DI SERVIZIO •

Tel: 06241-54224, Fax: - 54225 / **67663 Kaiserslautern**, Hans Krempel Haustechnik, Merkurstr. 6a, Tel: 0631-52078, Fax: - 52079 / **68309 Mannheim**, Hans Krempel Haustechnik, Heppenheimer Str.23, Tel:0621-737978, Fax:722404 / **68309 Mannheim**, Electronic SVC Schaaf, Reichenbachstr. 21-23, Tel:0621-727877, Fax:-7278750 / **68526 Ladenburg**, Salinger Elektro Service, Brauergasse 2, Tel: 06203-3341, Fax: - 16919 / **70329 Stuttgart**, Elektro Herterich, Fruchstr. 11, Tel: 0711-4201780, Fax: - 426153 / **74564 Crailsheim**, Elektro Reu, Lange Str. 20-22, Tel: 07951-6019, Fax: - 6018 / **75236 Kämpfelbach**, Horst Frei, Goethestr. 19, Tel: 07232-1518, Fax: - 5238 / **76185 Karlsruhe**, Electronic Service Franke, Lotzbeckstr. 9, Tel: 0721-570070, Fax: - 5700736 / **76872 Winden**, Hans Krempel Haustechnik, Hauptstr. 103, Tel: 06349-8571, Fax: - 3390 / **78462 Konstanz**, Elektro Herterich, nur telefonische Annahmestelle: Tel: 07531-27923 / **78737 Fluorn-Winzeln**, Edmund Schneider, Schaßbaumstr. 9, Tel: 07402-482, Fax: - 8014 / **79115 Freiburg**, Electronic Service Franke, Wiesentalstr. 13, Tel: 0761-42671-72, Fax: - 42675 / **79650 Schopfheim**, R. Grossmann, Feldbergstr. 21, Tel: 07622-7673, Fax: - 61900 / **80339 München**, Kessel & Schnitt, Schwanthaler Str. 110, Tel: 089-505802, Fax: - 5021596 / **82166 Gräfelfing**, Jung TV Service, Lohenstr. 14, Tel: 089-8545081, Fax: - 852413 / **85095 Denkendorf**, Reinhold Pfeiffer, Michlstr. 3, Tel/Fax: 08466-1319 / **85413 Hörgertshausen**, Elektro Radlmaier, Schloßstr. 7, Tel: 08764-458, Fax: - 1228 / **85609 Aschheim**, Dieter Beise, Waldweg 9a, Tel: 089-9034005, Fax: - 9044859 / **86157 Augsburg**, Johann Haslinger, Stadlberger Str. 67, Tel: 0821-523125, Fax: - 526664 / **87439 Kempten**, Radio Hartmann, Heiligkreuzer Str. 17, Tel: 0831-93231, Fax: 91319 / **89231 Neu-Ulm**, Markus Schneider, Gartenstr. 4, Tel: 0731-85897, Fax: - 74681 / **89564 Nattheim**, Elektro Oechsle GmbH, Fleinheimerstr. 49, Tel: 07321-71442, Fax: - 72341 / **90431 Nürnberg**, Gehado SVC, Dottenheimer Str. 4, Tel:0911-939740, Fax:0911-3263378 / **91126 Schwabach**, Elektro & Elektronik KD, Limbacherstr. 81, Tel: 09122-84135, Fax: - 61677 / **91522 Ansbach**, Elektro Merk GmbH, Am Ring 17, Tel: 0981-89574, Fax: - 86715 / **93102 Pfaffers**, Franz Bernhard, Regensburger Str. 60, Tel: 09481-1505, Fax: - 8124 / **94130 Obernzell**, Elektro Service Schurig, Hameterstr. 31, Tel: 08591-2400, Fax: - 1285 / **96052 Bamberg**, Bernhard Jackl, Aronstr. 2a, Tel: 0951-39332, Fax: - 37423 / **97070 Würzburg**, Wels GmbH, Untere Johannitergasse 16, Tel: 0931-355710, Fax: - 3557121 / **97318 Kitzingen**, K & M Hoffritz GmbH, Hermstr. 4-6, Tel: 09321-4221, Fax: - 32185 / **98724 Neuhaus**, DLG Haustechnik GmbH, Eisfelder Str. 32, Tel: 03679-4651, Fax: - 2169 / **99096 Erfurt**, Ernst Grüsser, Goethestr. 14, Tel: 0361-5626519, Fax: - 5626519 / **99734 Nordhausen**, Südharzer Dienstl. GmbH, Grimmallee 40, Tel: 03631-2040, Fax: 3654 / **99817 Eisenach**, Blitz Electronic GmbH, Bahnhofstr. 17, Tel: 03691-77291, Fax: 72105

## FRANCE

**En cas de réclamation pour les fours micro-ondes SHARP, nous vous prions de vous adresser à votre spécialiste ou à l'une des stations techniques agréées SHARP suivantes :**

**A.A.V.I.** : 1, Rue du Mont de Terre, 59818 Lesquin Cédex. Tél : 03 20 62 18 98 - Fax : 03 20 86 20 60. Départements desservis : 02, 08, 59, 62, 80 / **ASYSTEC** : P.A. Charles de Gaulle, 4 rue des Artisans, 95190 Goussainville. Tél : 01 39 88 80 00 - Fax : 01 34 38 91 20. Départements desservis : 60, 77, 93, 95 / **ATELIER ROUSSEL** : 12, Bld Flandre Dunkerque, 56100 Lorient. Tél : 02 97 83 07 41 - Fax: 02 97 87 02 36. Départements desservis : 22,29,35,44,56 / **C.E.A.T.** : 9, Rue de Venise , 21000 Dijon. Tél : 03 80 66 15 57 - Fax: 03 80 67 12 36. Départements desservis : 10,21,25,39,52,58,71,89 / **C.M.T.S.** : 38, Rue des Ormeaux , 75020 Paris. Tél : 01 43 70 20 00 - Fax: 01 43 70 36 46. Départements desservis : 75,77,78,91,92,93,94,95 / **C.T.E.** : Zone Tilly - 116 rte de Thionville, 57140 Woippy. Tél : 03 87 30 14 14 - Fax: 03 87 30 85 07. Départements desservis : 51,54,55,57,88 / **ELECMA** : 6 Bld Gueidon , 13013 Marseille. Tél : 04 91 06 22 56 - Fax : 04 91 06 22 90. Départements desservis : 13,26,30,34,43,48,83,84 / **ELECTRO SERVICE** : 21 rue de Mulhouse, BP 122, 68313 ILLZACH. Tél : 03 89 62 50 00 - Fax : 03 89 50 80 14. Départements desservis : 67,68,70,90 / **M.E.C.** : 118 Bld Tonnelé, 37020 Tours. Tél : 02 47 77 90 90 - Fax: 02 47 77 90 91. Départements desservis : 18,36,37,41,45,44,49,79,85,86 / **M.R.T.** : 74, Rue Albert Einstein , 72021 Le Mans Cedex. Tél : 02 43 28 52 20 - Fax: 02 43 24 93 81. Départements desservis : 28,53,61,72 / **ROSSIGNOL** : ZL du Brezet Est, 6 rue P. Boulanger,63100 Clermont Ferrand. Tél : 73 91 93 09, Fax:73 92 28 79. Départements desservis : 3, 15, 19, 23, 43, 63 / **SETELEC** : 23, Rue du Chatelet,76420 Bihorel les Rouen. Tél : 35 60 64 39 - Fax:35 59 93. 48. Départements desservis : 14,27,50,76 / **S.T.E.** : 3, Chemin de l'Industrie,06110 Le Cannet Rocheville. Tél : 93 46 05 00 - Fax: 93 46 51 18. Départements desservis : 04,06 / **S.T.V.S.** : 18, Rue Benoit Malon,42000 Saint Etienne. Tél : 77 32 74 57, Fax: 77 37 45 29. Départements desservis : 03,07,42,43,63 / **S.T.V.S.** : 10, Chemin Saint-Gobain ,69190 Saint Fons. Tél : 78 70 03 32 - Fax: 78 70 86 61. Départements desservis : 01,38,69,71,73,74 / **TECH SERVICE** : Batiment G-impasse Bouderville ,31100 Toulouse. Tél : 61 44 98 45 - Fax: 62 14 16 13. Départements desservis : 09,11,31,32,33,40,47,64,65,66,81,82 / **TIMO VIDEO** : 29 rue Elisabeth,91330 Yerres. Tél : 69 48 04 80 - Fax: 69 83 36 10. Départements desservis :28, 45, 77, 89, 912, 94 / **U.N.T.D.** : 1, Rue des Lourdaines, 76000 Rouen. Tél : 35 72 28 04 - Fax: 35 73 18 32. Départements desservis :14,27,50,76

## ITALIA

**NEL CASO SI VERIFICASSERO PROBLEMI ALLA VOSTRA APPARECCHIATURA POTRETE RIVOLGERVI PRESSO UN NOSTRO CENTRO DI ASSISTENZA AUTORIZZATO SHARP**

**Microcentro**, Via Falloppio 11, 20100 Milano, Phone: 02-26827306 / **Rota G.**, Via Martinella 65, 24020 Torre Boldone (BG), Phone: 035-344492 / **ServiceTVA**, Via Vergnano 59, 25127 Brescia, Phone: 011-2296000, Fax: 011253921 / **Tre Esse**, Via M. Coppino 96/e, 10147 Torino, Phone: 011-2296000, Fax: 011-253921 / **Video Service s.n.c.**, Via Giordano 52/54, 16100 Genova , Phone: 010-6043580 / **Tecnoservice s.n.c.**, Via San Vigilio 64/b-c-d, 39100 Bolzano, Phone: 0471-289062 / **Campi**, Via Noalese 87, 31100 Treviso, Phone: 0422-436245, Fax: 0422-435996 / **Video Service**, Via Vitruvio 11, 37100 Verona, Phone: 045-566299, Fax: 045-573865 / **Video Hi-fi**, Via Longhi 16 a/b, 40128 Bologna, Phone: 051-360986, Fax: 051-366863 / **Aerre Digit**, Via Marbellini 10/12, 50127 Firenze, Phone: 055-410874, Fax: 055-411490 / **Saec di Coppa**, Via Rinchiostra Nord 34, 54100 Massa, Phone: 0585-251724, Fax: 0585-791177 / **Tecnoconsult**, Via Mad. Alta 185, 06100Perugia, Phone: 075-5003089 / **Digitecnica s.n.c.**, Via Zuccarini 1- Zona Baraccola, 60131 Candia (AN) Phone :071-2866067 / **S.A.R.E. s.r.l.**, Via Barbana 35/37, 00142 Roma, Phone 06-5406796 / **Tecno Labs**, Via Naz. Delle Puglie 294, 80026 Casoria (NA), Phone: 081-5845923 / **Marcantonio**, Via G.M.Giovene 45, 70124 Bari, Phone: 080-5618029 / **Audio Video**, Via A. de Gasperi 44, 88018 Vibo Valentia , Phone: 0963-45571/2 / **A.V.S.**, Via Sassari2/c, 95100 Catania, Phone: 095-446696, Fax: 095-434337 / **AS. TEC.**, Via R. Villasantia 227, 09100 Cagliari, Phone: 070-524153, Fax: 070-504109

## ESPAÑA

**En caso de una reclamación con vuestra SHARP Microwave, preguntan por favor la casa dónde han comprado su máquina o informarse en una de las SHARP Service casas siguientes.**

**MERINO NICOLAS JOSE A.**, - 945 / 25.18.92 - AV JUDIZMENDI 24, 01003 VITORIA-GASTEIZ, ALAVA / **TELE-COLOR** - 96/585.24.60, CL DEL VENT 9, 03500 BENIDORM, ALICANTE / **TELECOM ELECTRONICA** - 96/539.50.21, CL HERNAN CORTES 8, 03600 ELDA, ALICANTE / **EUROSAT, S.L.** - 96/525.80.40, CL MONTERO RIOS 3303013 ALICANTE, ALICANTE / **ELECTRONICA GOMEZ** - 96/ 546.75.81, CL BALITASAR TRISTANY 100, 03201 ELCHE, ALICANTE / **ANGEL AVELLAN PUIG** - 965/ 21.32.55, CL POETA QUINTANA 13, 03004 ALICANTE, ALICANTE / **ELECTRONICA ELER** - 965/ 25.63.32, CL PINOSO 8, 03012 ALICANTE, ALICANTE / **INSAT, CB** - 971/ 36.53.18, CL PINTOR CALBO 30, 07703 MAHON, BALEARES (MENORCA) / **REPARACIONES ORTEGA** - 971/ 39.01.55, CL VIA PUNICA 33, 07800 IBIZA, BALEARES (IBIZA). / **AUDIO IMAGEN** - 971/ 31.46.59, CL JOSE RIQUELLOBET 8, 07800 IBIZA, BALEARES (IBIZA) / **IRTESA ELECTRONICA** - 971/ 20.47.02, CL JAUME FERRAN 72 BJOS, 07004 PALMA DE MALLORCA, BALEARES (MALLORCA) / **INSTALACIONES MAES, S.L.** - 971/ 27.49.47, CL SON NADAL 63, 07008 PALMA DE MALLORCA, BALEARES (MALLORCA) / **ELECTRON. PONS GOMILA SA** - 971/ 37.22.76 , CR NUEVA 162, 07730 ALAYOR, BALEARES (MENORCA) / **JOSE MARQUES ANGLADA,S.L.** - 971/ 38.54.54, CL LEPANTO 19, 07760 CIUDELA, BALEARES (MENORCA) / **ANOIA ELECTROVISIO** - 93/ 805.11.90, AV BALMES 12, 08700 IGUALADA, BARCELONA / **AUDIO VISION** - 385.78.08, CL MARE DEU MONTSERRAT 22, 08922 STA.COLOMA, BARCELONA / **SAC-2, S.C.P.** - 331.77.54, CL RIERA BLANCA 113, 08028 BARCELONA, BARCELONA / **FERMO** - 465.22.00, AV MORERA 5, 08915 BADALONA, BARCELONA / **ELEC.SAFONT** - 821.30.03, CL GRAL MANSO SOLA 31, 08600 BERGA, BARCELONA / **SERVINTERS, S.C.C.L.** - 389.44.60 - PZ CASAGEMES 20, 08911 BADALONA, BARCELONA / **TECNIK'S, S.C.P.** - 630.11.20, CL JOAN BARDINA 32,

**SHARP**

**SHARP ELECTRONICS (EUROPE) GMBH.**  
Sonninstrasse 3, 20097 Hamburg 1  
Germany

TINS-A164URRO

ENGLISH